

Veritas NetBackup™ 5340 Appliance Product Description

Veritas NetBackup™ 5340 Appliance Product Description

Last updated: 2017-12-21

Legal Notice

Copyright © 2017 Veritas Technologies LLC. All rights reserved.

Veritas and the Veritas Logo are trademarks or registered trademarks of Veritas Technologies LLC or its affiliates in the U.S. and other countries. Other names may be trademarks of their respective owners.

This product may contain third party software for which Veritas is required to provide attribution to the third party ("Third Party Programs"). Some of the Third Party Programs are available under open source or free software licenses. The License Agreement accompanying the Software does not alter any rights or obligations you may have under those open source or free software licenses. Refer to the third party legal notices document accompanying this Veritas product or available at:

<https://www.veritas.com/about/legal/license-agreements>

The product described in this document is distributed under licenses restricting its use, copying, distribution, and decompilation/reverse engineering. No part of this document may be reproduced in any form by any means without prior written authorization of Veritas Technologies LLC and its licensors, if any.

THE DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID. VERITAS TECHNOLOGIES LLC SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS DOCUMENTATION. THE INFORMATION CONTAINED IN THIS DOCUMENTATION IS SUBJECT TO CHANGE WITHOUT NOTICE.

The Licensed Software and Documentation are deemed to be commercial computer software as defined in FAR 12.212 and subject to restricted rights as defined in FAR Section 52.227-19 "Commercial Computer Software - Restricted Rights" and DFARS 227.7202, et seq. "Commercial Computer Software and Commercial Computer Software Documentation," as applicable, and any successor regulations, whether delivered by Veritas as on premises or hosted services. Any use, modification, reproduction release, performance, display or disclosure of the Licensed Software and Documentation by the U.S. Government shall be solely in accordance with the terms of this Agreement.

Veritas Technologies LLC
500 E Middlefield Road
Mountain View, CA 94043

<http://www.veritas.com>

Technical Support

Technical Support maintains support centers globally. All support services will be delivered in accordance with your support agreement and the then-current enterprise technical support policies. For information about our support offerings and how to contact Technical Support, visit our website:

<https://www.veritas.com/support>

You can manage your Veritas account information at the following URL:

<https://my.veritas.com>

If you have questions regarding an existing support agreement, please email the support agreement administration team for your region as follows:

Worldwide (except Japan)

CustomerCare@veritas.com

Japan

CustomerCare_Japan@veritas.com

Documentation

Make sure that you have the current version of the documentation. Each document displays the date of the last update on page 2. The latest documentation is available on the Veritas website:

https://www.veritas.com/content/support/en_US/Document_page.html

Documentation feedback

Your feedback is important to us. Suggest improvements or report errors or omissions to the documentation. Include the document title, document version, chapter title, and section title of the text on which you are reporting. Send feedback to:

APPL.docs@veritas.com

You can also see documentation information or ask a question on the Veritas community site:

<http://www.veritas.com/community/>

Veritas Services and Operations Readiness Tools (SORT)

Veritas Services and Operations Readiness Tools (SORT) is a website that provides information and tools to automate and simplify certain time-consuming administrative tasks. Depending on the product, SORT helps you prepare for installations and upgrades, identify risks in your datacenters, and improve operational efficiency. To see what services and tools SORT provides for your product, see the data sheet:

https://sort.veritas.com/data/support/SORT_Data_Sheet.pdf

Contents

Chapter 1	About the NetBackup 5340 Appliance	6
	About the NetBackup 5340 Appliance	7
	Features and components of the appliance	8
	Locating the appliance serial number	12
	About the appliance compute node disk drive configurations	13
	About the appliance disk drive LEDs	14
	About the compute node front panel USB port	15
	About the appliance control panel	15
	About the System Status LED states	17
	About the Power button LED states	20
	About the appliance compute node rear panel	21
	Standard available NetBackup 5340 Appliance PCIe-based I/O configurations	24
	Total NetBackup 5340 Appliance On-board and PCIe-based I/O ports	26
	NetBackup 5340 Appliance on-board network interface port locations and speeds	33
Chapter 2	About the Veritas 5U84 Storage Shelves	35
	About NetBackup 5340 Appliance storage shelves	35
	Available appliance storage options	37
	About the Veritas 5U84 Storage Shelf disk drive drawers	39
	5U84 Primary Storage Shelf and the 5U84 Expansion Storage Shelf control panel	50
	About the 5U84 Primary Storage Shelf and 5U84 Expansion Storage Shelf rear components	51
	Veritas 5U84 Primary Storage Shelf RAID Controllers	54
	Veritas 5U84 Expansion Storage Shelf Expansion I/O modules	58
	Veritas 5U84 Storage Shelf cooling modules	61
	5U84 Storage Shelf Power Supply Units	62

Chapter 3	NetBackup 5340 Appliance and 5U84 Storage Shelf cables	64
	Power cables	64
	Network cable	66
	Multi-mode fiber optic cable	67
	SAS3 cable	68
	Twinaxial copper cables	69
Appendix A	Technical specifications, Environmental/Protocol standards, and Compliance standards	71
	NetBackup 5340 compute node technical specifications	72
	Veritas 5U84 Storage Shelf technical specifications	75
	Environmental specifications	78
	Protocol standards	78
	Regulatory, compliance, and certification information	79
	Product regulatory compliance	80
	Product safety compliance	80
	Product EMC Compliance - Class A Compliance	81
	Product ecology compliance	81
	Certifications / Registrations / Declarations	82
	Electromagnetic compatibility notices	82
Index		85

About the NetBackup 5340 Appliance

This chapter includes the following topics:

- [About the NetBackup 5340 Appliance](#)
- [Features and components of the appliance](#)
- [Locating the appliance serial number](#)
- [About the appliance compute node disk drive configurations](#)
- [About the compute node front panel USB port](#)
- [About the appliance control panel](#)
- [About the appliance compute node rear panel](#)

About the NetBackup 5340 Appliance



The NetBackup 5340 Appliance is a hardware and software storage system that can scale up to a total of 1920TB of usable backup capacity. It consists of one 2U NetBackup 5340 Appliance compute node and one required externally attached 5U84 Primary Storage Shelf for data storage purposes. By itself, the NetBackup 5340 Appliance compute node does not provide internal disk space for data storage. You can add up to three optional 5U84 Expansion Storage Shelves if you require additional data storage space.

Note: Total usable backup capacity depends on the hardware configuration you purchase.

See [“Available appliance storage options”](#) on page 37.

Fibre channel (FC) cables connect the NetBackup 5340 Appliance compute node to the 5U84 Primary Storage Shelf. SAS3 cables connect the 5U84 Primary Storage Shelf to the optional 5U84 Expansion Storage Shelves.

See [“About NetBackup 5340 Appliance storage shelves”](#) on page 35.

High Availability

Veritas also offers a high availability (HA) solution for NetBackup 5340 Appliance systems. HA provides more efficient operation and improved aggregate performance for data protection operations. A NetBackup 5340 Appliance HA solution consists of two connected compute nodes that connect to common storage, and also runs appliance software version 3.1 or later. Refer to the *Veritas NetBackup™ Appliance*

High Availability Reference Guide for information about how to prepare for appliance HA deployment.

Features and components of the appliance

This section describes the features and components of the NetBackup 5340 Appliance.

Table 1-1 NetBackup 5340 Appliance system specifications

Technical Specification	NetBackup 5340 Appliance system
Supported operating system	Red Hat Enterprise Linux 7.3
Processor (Performance and capacity)	<ul style="list-style-type: none"> ■ Two Intel Xeon 6138 CPUs ■ Supports the high-performance processors with low-power consumption ■ Provides high efficiency and performance
CPU speed	2.0 GHz (Turbo: 3.7 GHz)
Cores	40 (20 per processor)
Cache	27.5 MB Cache L3
System memory	<p>Base memory capacity: 768GB</p> <p>Note: Higher memory capacities are capable depending on CPU population.</p> <p>Memory type: DDR4 RDIMM</p> <p>Configuration: 32GB x 24 RDIMM modules</p> <p>Operating voltage: 1.2V</p> <p>Configured clock speed: 2666MHz</p>
Usable MSDP and AdvancedDisk usable storage capacity (TB)	<p>AdvancedDisk usable storage capacity: up to 1,920TB</p> <p>MSDP storage capacity: up to 916TB</p> <p>See "Available appliance storage options" on page 37.</p>
SAS RAID mezzanine card	Yes

Table 1-1 NetBackup 5340 Appliance system specifications (*continued*)

Technical Specification	NetBackup 5340 Appliance system	
SAS RAID PCIe card installed in a appliance compute node PCIe riser assembly	No	
RAID levels	RAID10 (striping and mirroring) and RAID6 (block level striping with double distributed parity) are used as follows: <ul style="list-style-type: none"> ■ RAID10: NetBackup 5340 Appliance compute node system disks ■ RAID6: 5U84 Primary Storage Shelf and 5U84 Expansion Storage Shelf data storage disks <p>Note: RAID levels are generated using an onboard Intel RSMHC080 RAID controller that is installed in the NetBackup 5340 Appliance compute node.</p>	
Maximum number of storage shelves	4 One required 5U84 Primary Storage Shelf and three optional 5U84 Expansion Storage Shelves	
I/O Ports See “ Standard available NetBackup 5340 Appliance PCIe-based I/O configurations ” on page 24. See “ Total NetBackup 5340 Appliance On-board and PCIe-based I/O ports ” on page 26.	16Gb Fibre Channel ports (PCIe-based)	4 Used to connect the NetBackup 5340 Appliance compute node to the 5U84 Primary Storage Shelf
	10Gb Ethernet/iSCSI-capable ports (PCIe-based)	Up to 10, depending on the appliance I/O configuration
	8Gb Fibre Channel ports (PCIe-based)	Up to eight, depending on the appliance I/O configuration
	1Gb Ethernet ports (on-board)	4
Rack information	19" EIA standard	

Table 1-1 NetBackup 5340 Appliance system specifications (*continued*)

Technical Specification	NetBackup 5340 Appliance system
<p>Dimensions (IEC rack compliant)</p>	<p>Appliance compute node:</p> <ul style="list-style-type: none"> ■ Height: 8.89cm (3.5") (approximately 2U) ■ Width: 48.35cm (19") ■ Depth: 79.38cm (31.25") <p>See "NetBackup 5340 compute node technical specifications" on page 72.</p> <p>5U84 Primary Storage Shelf / 5U84 Expansion Storage Shelf:</p> <ul style="list-style-type: none"> ■ Height: 21.97cm (8.65") (approximately 5U - shelf, overall) ■ Width: 48.26cm (19") (across the mounting flange) ■ Length/depth: 91.44cm (36") (from rear of the front flanges to the rear extremity of the chassis) <p>Note: The lengths of the Veritas 5U84 Storage Shelves are longer than what a standard IEC-compliant rack normally supports. Due to the additional length, the rack-based PDU hardware may need to be installed on the outside of the rack to accommodate the storage shelves.</p> <p>See "Veritas 5U84 Storage Shelf technical specifications" on page 75.</p>
<p>Maximum weight</p>	<p>Appliance compute node: 23.26 kg (51.28 lbs)</p> <p>5U84 Primary Storage Shelf: 135 kg (298 lbs) with drives; no rail kit</p> <p>5U84 Expansion Storage Shelf: 135 kg (298 lbs) with drives; no rail kit</p>
<p>Typical power consumption</p>	<p>Appliance compute node</p> <ul style="list-style-type: none"> ■ 300 watts <p>Each storage shelf</p> <ul style="list-style-type: none"> ■ 1000 watts
<p>Maximum power consumption</p>	<p>Appliance compute node</p> <ul style="list-style-type: none"> ■ 600 watts <p>Each storage shelf</p> <ul style="list-style-type: none"> ■ 1300 watts

Table 1-1 NetBackup 5340 Appliance system specifications (*continued*)


Technical Specification	NetBackup 5340 Appliance system
Typical power consumption with a maximum of four external storage shelves	4,300 watts
Maximum power consumption with a maximum of four external storage shelves	5,800 watts
AC power requirements	<p>Compute node:</p> <ul style="list-style-type: none"> ■ 220 VAC at 3.1 A <p>Each storage shelf:</p> <ul style="list-style-type: none"> ■ 200 - 240 VAC at 6.67 A
AC power cable	<p>Compute node:</p> <ul style="list-style-type: none"> ■ Specification: IEC-60320-C14 to IEC-60320-C13, 15A/250V, Black, 4ft The IEC-60320-C14 plugs into a Power Distribution Unit. The IEC-60320-C13 plugs into an appliance or storage shelf power supply. <p>Note: If your power distribution unit is not compatible with the IEC-60320-C14 plug, Veritas recommends that you purchase your power cable locally. Make sure the power cable meets or exceed the indicated power rating.</p> <p>See "Power cables" on page 64.</p> <p>Storage shelf:</p> <ul style="list-style-type: none"> ■ Specification: IEC-60320-C20 to IEC-60320-C19, 20A/250V, Black, 4ft The IEC-60320-C20 plugs into a Power Distribution Unit (PDU) on a rack. The IEC-60320-C19 plugs into an appliance or a storage shelf power supply. <p>Note: If your power distribution unit is not compatible with the IEC-60320-C20 plug, Veritas recommends that you purchase your power cable locally. Make sure the power cable meets or exceed the indicated power rating.</p> <p>See "Power cables" on page 64.</p>

Table 1-1 NetBackup 5340 Appliance system specifications (*continued*)

Technical Specification	NetBackup 5340 Appliance system
Power Factor	> 90%
System cooling requirement (heat dissipation) (Appliance with maximum storage shelves attached)	Typical: <ul style="list-style-type: none"> ■ 14,408 BTU/hour Maximum: <ul style="list-style-type: none"> ■ 19,267 BTU/hour
Operating voltage	200 – 240 VAC
AC Frequency range	50/60 Hz
Power conversion efficiency	Appliance compute node: 90% + 5U84 Primary/Expansion Storage Shelf: 89% +
Acoustic noise	Appliance compute node: <ul style="list-style-type: none"> ■ 70 dBA 5U84 Primary/Expansion Storage Shelf: <ul style="list-style-type: none"> ■ 82 dBA

Locating the appliance serial number

A vertical bar on the rear panel of the appliance compute node contains the serial number.

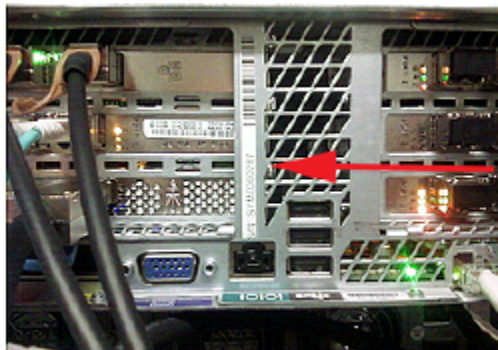

About the appliance compute node disk drive configurations

The NetBackup 5340 Appliance compute node contains five 2 TB SAS hard disk drives, which can be accessed from the compute node's front panel. An embedded RAID controller on the compute node's mainboard is used to configure four of the five disk drives into two RAID1 mirrored volumes.

The two RAID1 volumes are labeled Volume 0 and Volume 1. The disk drives that are located in slot 0 and slot 1 are configured as the RAID1, VOLUME0 device. These disk drives contain the appliance operating system, the operating system swap file, and the NetBackup application. You can hot-swap one of these disk drives at a time if a drive becomes problematic. However, you cannot operate the appliance if both disk drives are removed.

The disk drives in slot 2 and slot 3 are configured as the RAID1, VOLUME1 device. Volume 1 contains the log files. As with the RAID1, VOLUME0 device, you can hot-swap one disk drive at a time if a drive becomes problematic. However, you cannot operate the appliance if both drives are removed.

The appliance uses the disk drive that is located in slot 4 as a hot-spare disk. If a disk drive in either of the RAID volume experiences a hardware error, the appliance automatically initiates a RAID rebuild operation. During the rebuild operation, the appliance dynamically accesses the hot-spare disk from slot 4 and uses it to rebuild the RAID volume.

Figure 1-1 NetBackup 5340 Appliance compute node front panel disk slot assignments



Table 1-2 NetBackup 5340 Appliance compute node front panel disk drive configurations

Slot	RAID level	Disk drive size (TB)	Disk drive role
0, 1	RAID1	2 TB	Operating system boot volume / operating system swap file / NetBackup application
2, 3	RAID1	2 TB	Log files

Table 1-2 NetBackup 5340 Appliance compute node front panel disk drive configurations (*continued*)

Slot	RAID level	Disk drive size (TB)	Disk drive role
4		2 TB	Hot spare
5 - 11	No disk drives installed		

About the appliance disk drive LEDs

Each disk drive module contains two LEDs on the left side of each module. The LEDs appear as follows:

Figure 1-2 NetBackup 5340 Appliance disk drive module LEDs

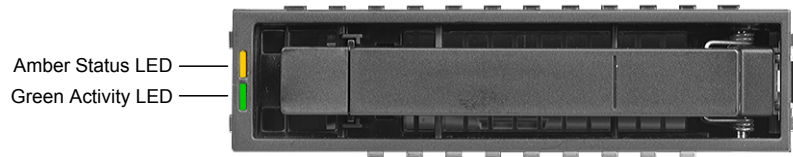


Table 1-3 NetBackup 5340 Appliance disk drive LED status

Number	Description	LED behavior	Condition
1	Amber Status LED	Off	No disk drive access and no disk drive faults
		Solid amber	A disk drive fault has occurred
		Blinking amber	A RAID rebuild is in progress
2	Green Activity LED	Off	Power on - the disk drive has spun down
		Solid green	Power on - no disk drive activity
		Blinking green	Power on - the disk drive is processing a command or Power on - the disk drive is spinning up

Note: Disk drive modules that do not contain disk drives also have LEDs. Although there is no drive activity going on, some colored lights may still be seen through the disk modules.

About the compute node front panel USB port

The NetBackup 5340 Appliance compute node front panel includes a USB 2.0-compliant port that supports a data transfer rate of up to 480 Mb/second.



About the appliance control panel

The 5340 Appliance compute node includes a control panel on the right side of the front panel. System information is shown on this control panel.

Figure 1-3

5340 Appliance control panel

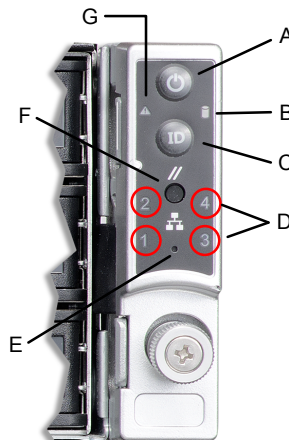


Table 1-4 5340 Appliance control panel system LED descriptions

Label	Description	
A	Power button with integrated LED	The Power button toggles the system on and off. See “About the Power button LED states” on page 20.
B	Hard Drive Activity LED	The drive activity LED on the front panel indicates drive activity from the on-board hard disk controllers.
C	System ID button with integrated LED	The System ID button toggles the integrated ID LED and the blue server board LED on and off. The system ID LED identifies the system for maintenance when it is racked with similar server systems.
D	Network Activity LEDs	The front control panel includes four activity LED indicators for each on-board network interface controller (NIC). <ul style="list-style-type: none"> ■ NIC-1 represents network interface controller 1 ■ NIC-2 represents network interface controller 2 ■ NIC-3 represents network interface controller 3 ■ NIC-4 represents network interface controller 4 When network links are detected on the controllers, the LEDs are activated and remain on. The LEDs blink when network activity occurs, and the rate at which they blink is determined by the amount of network activity that occurs.
E	NMI button (recessed, tool required for use)	When it is depressed, the NMI button puts the appliance in a halt state, issues a non-maskable interrupt (NMI), and then triggers the non-maskable interrupt. All server data can be lost. Veritas recommends that you do not enable NMI by pressing the NMI button.
F	System Cold Reset Button (recessed, tool required for use on non-storage models)	When depressed, the System Cold Reset button re-boots and re-initializes the appliance.


Table 1-4 5340 Appliance control panel system LED descriptions
(continued)

Label	Description	
G	System Status LED	<p>The System Status LED is bi-color indicator that uses the colors green and amber to display the current health of the appliance.</p> <p>Two locations are provided for you to monitor the health of the system. You can find the first location on the front control panel, while the second location is located on the back edge of the server board. It is viewable from the rear of the appliance. Both LEDs show the same state of health.</p> <p>See “About the System Status LED states” on page 17.</p>

About the System Status LED states

The System Status LED is a bi-color (Green/Amber) indicator that shows the current health of the system. The appliance provides two locations for this feature. The first location is on the Front Control Panel, while the second location is on the back edge of the server board.

Figure 1-4 System Status LED control panel location

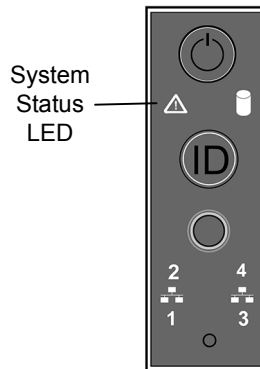

The following table provides a description of each LED state.

Table 1-5 System Status LED states

Color	State	Criticality	Description
No color	Off - The system is not operating	Not ready	<ul style="list-style-type: none"> ■ System is power off (AC and/or DC) ■ System is in EuP Lot6 Off Mode ■ System is in S5 Soft-Off State
Green	Solid on (SO)	Healthy	Indicates that the system is running (in S0 State) and its status is "Healthy". The system is not exhibiting any errors. AC power is present and BMC has booted and manageability functionality is up and running.
Green	~1 Hz blink	Degraded The system is operating in a degraded state although still functional. or The system is operating in a redundant state but with an impending failure warning.	<p>System degraded:</p> <ul style="list-style-type: none"> ■ Redundant loss, such as power supply or fan. Applies only if the associated platform sub-system has redundancy capabilities. ■ Fan warning or failure when the number of fully operational fans is more than minimum number needed to cool the system. ■ Non-critical threshold crossed: Temperature (including HSBP temp), voltage, input power to power supply, output current for main power rail from power supply and Processor Thermal Control (Therm Ctrl) sensors. ■ Power supply predictive failure occurred while redundant power supply configuration was present. ■ Unable to use all of the installed memory (one or more DIMMs failed/disabled but functional memory remains available). ■ Battery failure. ■ BMC executing in uBoot. (Indicated by Chassis ID blinking at 3Hz). System in degraded state (no manageability). BMC uBoot is running but has not transferred control to the BMC Linux. Server will be in this state 6-8 seconds after BMC reset while it pulls the Linux image into flash.

Table 1-5 System Status LED states (*continued*)

Color	State	Criticality	Description
Green	~1 Hz blink	Degraded (continued)	<p>System degraded (continued):</p> <ul style="list-style-type: none"> ■ BMC booting Linux. (Indicated by Chassis ID solid ON). System in degraded state (no manageability). Control has been passed from BMC uBoot to BMC Linux itself. It will be in this state for 10-20 seconds. ■ BMC Watchdog has reset the BMC. ■ Power unit sensor offset for configuration error is asserted. ■ Hard disk drive HSC is off-line or degraded.
Amber	~1 Hz blink	<p>Non-critical</p> <p>The system is operating in a degraded state with an impending failure warning. However, the system is still functioning.</p>	<p>Non-fatal - However, the system is likely to fail:</p> <ul style="list-style-type: none"> ■ Critical threshold crossed – Voltage, temperature (including HSBP temp), input power to power supply, output current for main power rail from power supply and PROCHOT (Therm Ctrl) sensors. ■ VRD Hot asserted ■ Minimum number of fans to cool the system not present or failed ■ Hard drive fault ■ Power Unit Redundancy sensor – Insufficient resources offset (indicates not enough power supplies present) ■ Correctable memory error threshold has been reached for a failing DIMM when the system is operating in a non-redundant mode.
Amber	Solid on	<p>Critical, non-recoverable – System is halted</p>	<p>Fatal alarm – system has failed or shutdown:</p> <ul style="list-style-type: none"> ■ CPU CATERR signal asserted ■ MSID mismatch detected (CATERR also asserts for this case) ■ CPU1 is missing ■ CPU Thermal Trip ■ No power – power fault ■ DIMM failure when there is only one DIMM present; no other good DIMM memory present ■ Runtime memory uncorrectable error in non-redundant mode.

Table 1-5 System Status LED states (*continued*)


Color	State	Criticality	Description
Amber	Solid on	Critical, non-recoverable – System is halted	<ul style="list-style-type: none"> ■ Uncorrectable Runtime memory error in non-redundant mode ■ DIMM Thermal Trip or equivalent ■ CPU ERR2 signal is asserted ■ BMC/Video memory test failed (Chassis ID shows blue/solid-on for this condition) ■ SBB Thermal Trip or equivalent ■ 240VA fault ■ Both uBoot BMC FW images are bad (Chassis ID shows blue/solid-on for this condition) ■ Fatal Error in processor initialization: <ul style="list-style-type: none"> ■ Processor family not identical ■ Processor model not identical ■ Processor core/thread counts not identical ■ Processor cache size not identical ■ Unable to synchronize processor frequency ■ Unable to synchronize QPI link frequency

About the Power button LED states

The Power button is located on the NetBackup 5340 Appliance control panel. It is used to turn the appliance on or off.

Figure 1-5

Power button control panel location

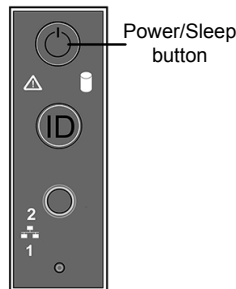

The following table provides a description of each power state.

Table 1-6 Power button LED states

State	Power Mode	LED	Description
Power - off	Non-ACPI	Off	The system power is off, and the BIOS has not initialized the chipset.
Power - on	Non-ACPI	On	The system power is on and the green Power button LED is active.
S0	ACPI (Advanced Configuration and Power Interface)	Steady on	The system and the operating system are up and running.
S5	ACPI (Advanced Configuration and Power Interface)	Off	Mechanical is off and the operating system has not saved any context to the hard disk drive.

About the appliance compute node rear panel

The rear panel of the appliance compute node has several access ports and other features, which are displayed in the following figures.

Figure 1-6 5340 Appliance compute node rear panel overview

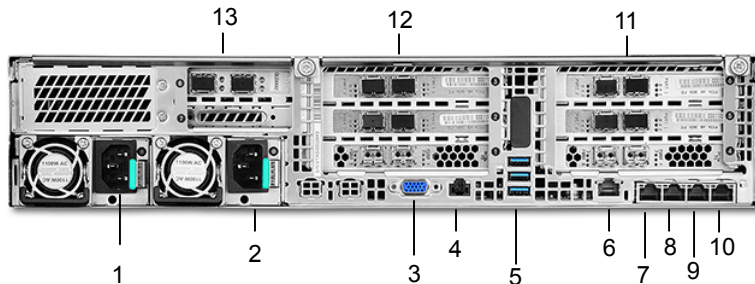


Table 1-7 5340 Appliance compute node rear panel features and connectors

Number	Function
1,2	Power Supply 1 and Power Supply 2 - Dual, redundant, and hot-swappable power supply modules
3	DB-15 VGA monitor connector

Table 1-7 5340 Appliance compute node rear panel features and connectors
(continued)

Number	Function
4	Serial port - Serial connection for Veritas Technical Support use only
5	Three stacked USB 3.0 Type A serial ports for general use
6	IPMI port - An external RJ45 port used for appliance remote management purposes
7	<p>eth0/NIC 1</p> <p>A 1-GbE port copper connector that is reserved for use during the initial configuration of the appliance. After completing the initial configuration, you can connect NIC1 (eth0) to an administrative network that does not provide any backup data transfer</p> <p>For more information, see the <i>Veritas NetBackup™ 53xx Appliance Initial Configuration Guide - Release 3.1</i>.</p> <p>Note: Veritas does not support forming a NIC bond using eth0/NIC1 with other eth/NIC ports.</p>
8	<p>eth1/NIC 2</p> <p>A 1-GbE port copper connector for general use</p>
9	<p>eth2/NIC 3</p> <p>A 1-GbE port copper connector for general use</p>
10	<p>eth3/NIC 4</p> <p>A 1-GbE port copper connector for general use</p>
11	PCIe riser assembly 1 *
12	PCIe riser assembly 2 *
13	<p>PCIe riser assembly 3 *</p> <p>Contains two half height PCIe slots.</p> <p>Note: PCIe riser assembly 2 and riser assembly 3 are riveted together. As a result, riser assembly 2 and riser assembly 3 are removed as one unit.</p>

Figure 1-8 NetBackup 5340 Appliance rear port color codes




See [“Standard available NetBackup 5340 Appliance PCIe-based I/O configurations”](#) on page 24.

Standard available NetBackup 5340 Appliance PCIe-based I/O configurations

The rear panel of the NetBackup 5340 Appliance contains three PCIe riser card assemblies. PCIe riser card assemblies 1 and 2 each support three standard PCIe cards, while PCIe riser card assembly 3 supports two low profile PCIe cards. The slots are labeled 1 to 8. Slots 1, 2, and 3 are located in PCIe riser card assembly 2. Slots 4, 5, and 6 are located in PCIe riser card assembly 1, while slots 7 and 8 are located in PCIe riser card assembly 3.

Figure 1-9 NetBackup 5340 Appliance rear panel riser assembly locations and PCIe slot number assignments

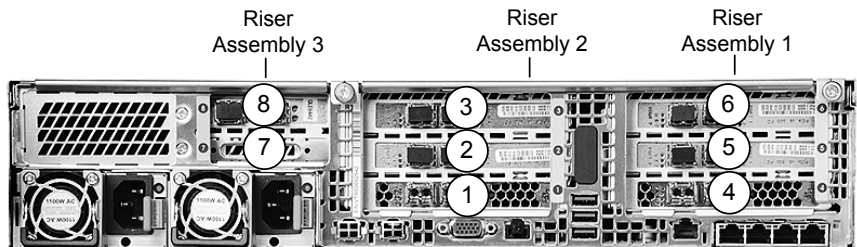

The NetBackup 5340 Appliance supports multiple PCIe-based I/O configurations. The following table shows the standard I/O configurations that are available when you order a NetBackup 5340 Appliance.

Note: A NetBackup appliance high availability (HA) configuration must use two identical appliances with regard to model number and hardware configuration.

For example, use two model 5340 appliances with configuration D. You cannot use one model 5340 appliance with configuration D and one model 5330 appliance with configuration D.

This requirement applies to all of the I/O configurations for each model.

Table 1-8 Standard available NetBackup 5340 Appliance PCIe-based I/O configurations

I/O configuration option	Slot 1 *	Slot 2	Slot 3	Slot 4 *	Slot 5	Slot 6	Slot 7	Slot 8
A	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	Reserved	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)
B	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE2562 8Gb FC HBA ³	Reserved	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)
C	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	Reserved	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)
D	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	Reserved	QLogic QLE8442 10GbE NIC ^{1, 3} (iSCSI capable)

Table 1-8 Standard available NetBackup 5340 Appliance PCIe-based I/O configurations (*continued*)

I/O configuration option	Slot 1 *	Slot 2	Slot 3	Slot 4 *	Slot 5	Slot 6	Slot 7	Slot 8
E	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	QLogic QLE2692 16Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	QLogic QLE2562 8Gb FC HBA ³	Reserved	QLogic QLE8442 10GbE NIC ^{1,3} (iSCSI capable)

* The 16Gb Fibre Channel HBA ports in slots 1 and 4 are used to connect the NetBackup 5340 Appliance compute node to the Veritas 5U84 Primary Storage Shelf. **As a result, slots 1 and 4 do not support standard network I/O operations.**

PCIe card cable connection types:

- ¹ Direct-Attach copper cable (also called a Twinaxial cable or Twinax)
- ² Standard copper
- ³ Fiber optic cable

See [“Total NetBackup 5340 Appliance On-board and PCIe-based I/O ports”](#) on page 26.

Total NetBackup 5340 Appliance On-board and PCIe-based I/O ports

The following table shows the total number of I/O ports that are available with the standard NetBackup 5340 Appliance I/O configurations.

Table 1-9 Total number of NetBackup 5340 Appliance On-board and PCIe-based I/O ports for each available I/O configuration

I/O Configuration option	16Gb Fibre Channel ports (optical)	10Gb Ethernet/iSCSI PCIe ports (copper)	8Gb Fibre Channel PCIe ports (optical)	1Gb Ethernet ports (copper)
A	4	10	0	4 (on-board)
B	4	8	2	4 (on-board)

Table 1-9 Total number of NetBackup 5340 Appliance On-board and PCIe-based I/O ports for each available I/O configuration
(continued)

I/O Configuration option	16Gb Fibre Channel ports (optical)	10Gb Ethernet/iSCSI PCIe ports (copper)	8Gb Fibre Channel PCIe ports (optical)	1Gb Ethernet ports (copper)
C	4	6	4	4 (on-board)
D	4	4	6	4 (on-board)
E	4	2	8	4 (on-board)

Cable connection types:

copper = Standard copper cable or Direct-Attach copper cable

Note: Direct-Attach copper cable is also known as a Twinaxial cable or Twinax

optical = fiber optic cable

See [“Standard available NetBackup 5340 Appliance PCIe-based I/O configurations”](#) on page 24.

QLE2692 dual-port 16Gb Fibre Channel host bus adapter

The QLE2592 dual-port 16Gb Fibre Channel (FC) host bus adapter connects the appliance compute node to the 5U84 Primary Storage Shelf.

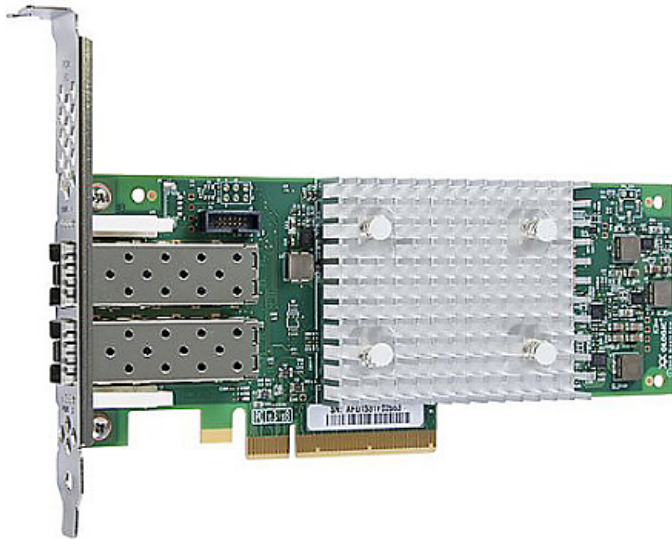


Table 1-10 QLE2692 dual-port 16Gb Fibre Channel host bus adapter specifications

Item	Description
Bracket height	Full Height
Form factor	Low-profile PCIe card (6.6 inches × 2.731 inches)
Power consumption (watts)	9.3 W
Operating temperature	0°C to 55°C (32°F to 131°F)
Storage temperature	-20°C to 70°C (-4°F to 158°F)
Operating humidity	10% to 90%
Storage humidity	5% to 95%

Table 1-10 QLE2692 dual-port 16Gb Fibre Channel host bus adapter specifications (*continued*)

Item	Description				
System interface type	PCIe v3.0				
Certifications	UL, CSA, TUV, CB, FCC, VCCI				
Maximum cable distances	Rate	Cable and Distance (m) (multimode optic cable)			
		OM1	OM2	OM3	OM4
	4Gbps	70	150	380	400
	8Gbps	21	50	150	190
	16Gbps	*	35	100	125

* Not supported

The following table describes the Fibre Channel host bus adapter LED indicator status activity.

Table 1-11 QLE2592 dual-port 16Gb Fibre Channel host bus adapter LED indicator status activity

Yellow LED	Green LED	Amber LED	Activity
Off	Off	Off	Power off
On	On	On	Power on (pre-firmware initialization)
Blink	Blink	Blink	Power on (post-firmware initialization)
Blink alternately	Blink alternately	Blink alternately	Firmware error
Off	Off	On/Blink	4Gbps link / input-output (I/O) activity
Off	On/Blink	Off	8Gbps link / input-output (I/O) activity
On/Blink	Off	Off	16Gbps link / input-output (I/O) activity

QLE8442 dual-port 10Gb Ethernet/iSCSI capable card with SFP+ modules

The QLE8442 is a dual-port 10GbE network interface card. It supports simultaneous LAN (TCP/IP) and SAN (Fibre Channel over Ethernet [FCoE] and iSCSI) traffic at 10Gbps Ethernet (GbE) line rate speeds. The QLE8442 also provides very low host CPU usage by enabling full hardware offloads.

It supports the iSCSI protocol at 10Gb Ethernet (10GbE) line rate. The card provides iSCSI hardware offload, which reduces CPU-intensive iSCSI protocol processing.

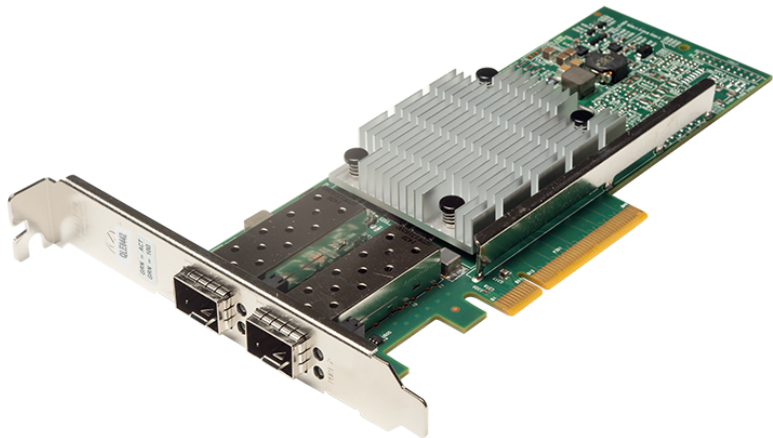


Table 1-12 QLE8442 dual-port 10Gb Ethernet card specifications

Item	Specification
Bracket height	Full height
Power consumption	9.65 watts (nominal)
System interface type	PCIe v3.0
Speed and slot width	8.0 GT/s, 8-lane
Storage over Ethernet	iSCSI

Table 1-12 QLE8442 dual-port 10Gb Ethernet card specifications (*continued*)

Item	Specification
LED indicators	LINK/ACTIVITY Off = No link (cable disconnected) Continuously illuminated = Line on Blinking = Network activity
Certifications	FCC A, ICES A, UL, CE, VCCI, CISPR, KCC
Operating temperature	0 to 55 C (32 TO 131 f)
Storage temperature	-40 to 65 C (-40 to 149 F)
Operational humidity	7% to 93% @ 55 C
Storage humidity	93% maximum at 65 C
Air flow	100 LFM @ 55 C

To purchase a QLE8442 dual-port 10Gb Ethernet card with SFP+ modules for your appliance, contact your Veritas sales representative, or your Veritas Partner representative.

QLE8442 dual-port 10Gb Ethernet card with SFP+ modules

SKU Number	Description
18293	NETBACKUP APPLIANCE XX40 QLOGIC QLE8442 10GBPS DUAL PORT ETHERNET/ISCSI CRU with SFP modules included

QLE2562 dual-port 8Gb Fibre Channel host bus adapter with SFP+ modules

The QLE2562 dual-port 8Gb Fibre Channel (FC) host bus adapter with SFP+ modules connects the appliance to clients or other devices for fiber transport data transfer.

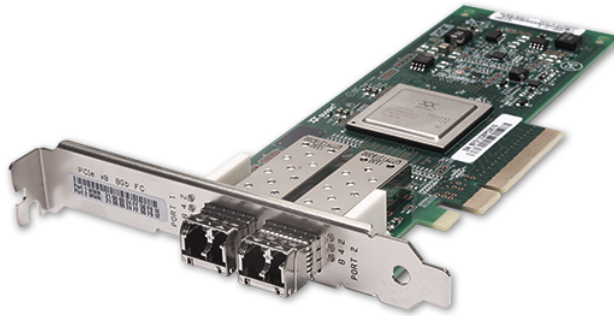


Table 1-13 QLE2562 dual-port 8Gb Fibre Channel host bus adapter port specifications

Item	Description			
Bracket height	Full Height			
Power consumption (watts)	6.2 watts (typical)			
Operating temperature	0°C to 55°C (32°F to 131°F)			
Storage temperature	-40°C to 70°C (-40°F to 158°F)			
Operating humidity	5% RH to 93% RH (non-operating, non-condensing) and 5% RH to 93% RH (operating, non-condensing)			
System interface type	PCIe v3.0			
Certifications	FCC B, UL, CE, VCCI, CISPR, KN, CNS			
External connections	Rate	OM1	OM2	OM3
	2Gbps	150m	300m	500m
	4Gbps	70m	150m	380m
	8Gbps	21m	50m	150m

The following table describes the Fibre Channel host bus adapter LED indicator status activity.

Table 1-14 QLE2562 dual-port 8 Gb Fibre Channel host bus adapter LED indicator status activity

Yellow LED	Green LED	Amber LED	Activity
Off	Off	Off	Power off
On	On	On	Power on (pre-firmware initialization)
Blink	Blink	Blink	Power on (post-firmware initialization)
Blink alternately	Blink alternately	Blink alternately	Firmware error
Off	Off	On/Blink	4Gbps link / input-output (I/O) activity
Off	On/Blink	Off	8Gbps link / input-output (I/O) activity
On/Blink	Off	Off	16Gbps link / input-output (I/O) activity

To purchase a QLE2562 dual-port 8Gb Fibre Channel host bus adapter for your appliance, contact your Veritas sales representative, or your Veritas Partner representative.

QLE2562 dual-port 8Gb Fibre Channel host bus adapter with SFP+ modules

SKU Number	Description
21265747	NETBACKUP APPLIANCE 5X00 FC HBA 8GB DUAL PORT CRU CORPORATE (SFP modules included)

See [“Standard available NetBackup 5340 Appliance PCIe-based I/O configurations”](#) on page 24.

NetBackup 5340 Appliance on-board network interface port locations and speeds

Four 1Gb Ethernet on-board network interface ports are available for general use with each NetBackup 5340 Appliance.

Figure 1-10 NetBackup 5340 Appliance on-board network interface port locations



Table 1-15 NetBackup 5340 Appliance on-board network interface port information

Item	Function
eth0/NIC1 (copper/RJ45 connector)	Used for the initial configuration of the appliance. After completing the initial configuration, you can connect NIC1 (eth0) to an administrative network that does not provide any backup data transfer. For more information, see the <i>Veritas NetBackup™ 53xx Appliance Initial Configuration Guide - Release 3.1</i> . Note: Veritas does not support forming a NIC bond using eth0/NIC1 with other eth/NIC ports.
eth1/NIC2 (copper/RJ45 connector)	A 1-GbE port for general use
eth2/NIC3 (copper/RJ45 connector)	A 1-GbE port for general use
eth3/NIC4 (copper/RJ45 connector)	A 1-GbE port for general use
IPMI port (copper/RJ45 connector)	A 1-GbE port that is used for appliance remote management purposes

About the Veritas 5U84 Storage Shelves

This chapter includes the following topics:

- [About NetBackup 5340 Appliance storage shelves](#)
- [About the 5U84 Primary Storage Shelf and 5U84 Expansion Storage Shelf rear components](#)

About NetBackup 5340 Appliance storage shelves



Veritas offers two external storage shelf models for the NetBackup 5340 Appliance.

These include the:

- Veritas 5U84 Primary Storage Shelf (required)
- Veritas 5U84 Expansion Storage Shelf (optional)

Both of the 5U84 Storage Shelf chassis include a set of common internal core components, along with a set of plug-in modules.

The core components include:

- Two sliding disk drawers that contain Disk Drive In Carrier (DDIC) modules
- A front operations panel
- A front bezel
- A mid-plane printed circuit board (PCB) to connect the RAID controller on the 5U84 Primary Storage Shelf. It is also used to connect the Expansion I/O modules on the 5U84 Expansion Storage Shelf.
For example, the 5U84 Primary Storage Shelf uses two redundant RAID Controller modules that plug into its internal mid-plane PCB. The 5U84 Expansion Storage Shelf uses two redundant Storage Bay Bridge 2.1-compliant Expansion I/O modules that plug into its internal mid-plane PCB.

In addition to the core components, the storage shelves also incorporate the following plug-in modules:

- Two redundant RAID Controller modules (*5U84 Primary Storage Shelf only*)
- Two redundant Expansion I/O modules (*5U84 Expansion Storage Shelf only*)
- Two redundant Power Supply Units (PSUs)
- Five Fan Modules
- Up to 84 Disk Drive In Carrier (DDIC) modules with drives installed
- A rail kit for rack mounting

The 5U84 Primary Storage Shelf and the 5U84 Expansion Storage Shelf each use a 5U chassis. Each chassis contains two sliding disk drive drawers that are located in the front of the storage shelf. Each drawer holds 42 Disk Drive In Carrier (DDIC) modules. The DDIC modules are installed in the drive drawer slots, which hold a total of 84 disk drives. Each DDIC module holds SAS3, 7200 rpm hard disk drives, in either 4TB or 8TB capacities. The disk drives and the DDIC modules are hot-swappable and can be replaced on-site while the storage shelf is operational.

Note: Whether you use 4TB or 8TB disk drives in the storage shelves, each storage shelf drawer must be populated with disk drives of the same capacities.

In each storage shelf, two disk drives are used as global hot spares. Four of the disk drives provide storage space for a dedicated RAID 10 metadata volume group. When 4TB disk drives are used, the storage shelf provides 7.27TBs of metadata storage capacity. When 8TB disk drives are used, the storage shelf provides 15.75TBs of metadata storage capacity. The remaining disks are configured in a

storage group that uses RAID 6 disk array technology. These disks are used for MSDP and AdvancedDisk data storage purposes. Depending on the storage configuration you purchase, the NetBackup 5340 Appliance storage system supports up to 1,920TBs of usable data storage space.

Note: RAID10 is also known as RAID 1+0. It combines disk mirroring and disk striping to protect data.

Available appliance storage options

The NetBackup 5340 Appliance compute node does not contain internal disk space on which to store data. Instead, the NetBackup 5340 Appliance uses the Veritas 5U84 Primary Storage Shelf as the main data storage device. The 5U84 Primary Storage Shelf connects to the NetBackup 5340 Appliance compute node and uses RAID 6 disk array technology to protect the stored data.

Note: RAID 6 is also known as double-parity RAID. It uses two parity stripes on each disk to protect data. RAID 6 allows for two hard disk failures within the RAID disk array before any data is lost.

When additional data storage space is required, Veritas offers the Veritas 5U84 Expansion Storage Shelf. The 5U84 Expansion Storage Shelf connects to the 5U84 Primary Storage Shelf using mini-SAS hard drive cables. Up to three 5U84 Expansion Storage Shelves can be connected to the 5U84 Primary Storage Shelf. After they are connected, all 5U84 Expansion Storage Shelves receive RAID 6 data protection through the 5U84 Primary Storage Shelf.

[Table 2-1](#) shows the available storage shelf storage capacities using 4-TB and 8-TB disk capacities.

Note: Veritas does not support mixing 4TB and 8TB disk drives within a storage shelf.

Table 2-1 Usable 5U84 Storage Shelf storage capacities by disk drive capacities


Usable storage capacities (using 4-TB Drives)	Usable storage capacities (using 8-TB Drives)
120TB	240TB
240TB	480TB

Table 2-1 Usable 5U84 Storage Shelf storage capacities by disk drive capacities (*continued*)

Usable storage capacities (using 4-TB Drives)	Usable storage capacities (using 8-TB Drives)
360TB	720TB
480TB	960TB*
600TB	1200TB*
720TB	1440TB*
840TB	1680TB*
960TB*	1920TB*

*NetBackup 5340 Appliance software version 3.1 supports up to 916TBs of usable MSDP storage capacity.

Figure 2-1 Available 5U84 Storage Shelf configurations

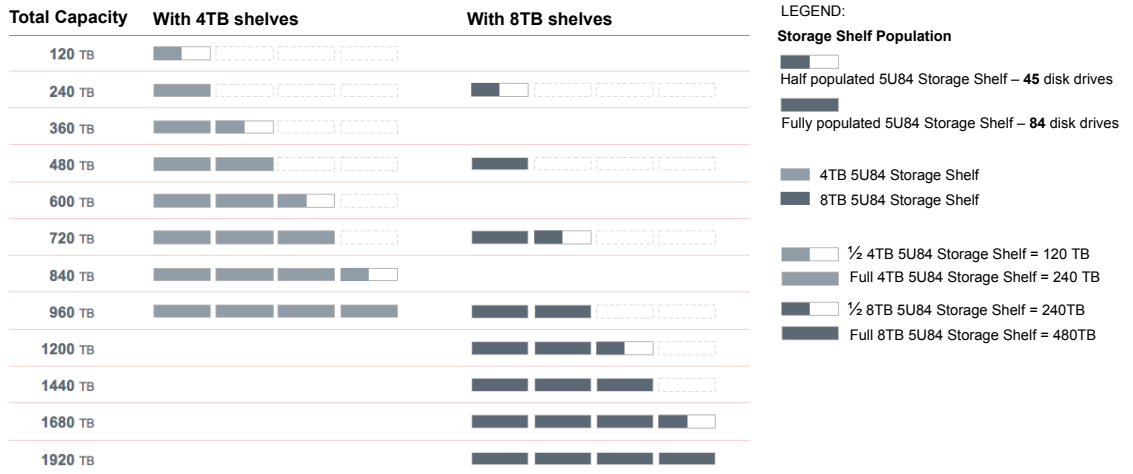

To determine the NetBackup Appliance hardware configuration for the storage capacities that your environment requires, contact your Veritas sales representative, or your Veritas Partner representative.

About the Veritas 5U84 Storage Shelf disk drive drawers

This section discusses the 5U84 Primary Storage Shelf and 5U84 Expansion Storage Shelf disk drive drawers and the components that comprise the drawers.

Disk drive drawers

Figure 2-2 5U84 Primary Storage Shelf/5U84 Expansion Storage Shelf disk drive drawer



The 5U84 Primary Storage Shelf and the 5U84 Expansion Storage Shelf each use a 5U chassis. Each chassis contains two sliding drawers that are accessible from the front of the storage shelves. Each drawer holds 42 Disk Drive In Carrier (DDIC) modules. The DDIC modules are installed in each of the drive drawer slots, which can hold a total of 84 disk drives. Each DDIC module holds one 3.5" SAS3, 7200 rpm hard disk drive, in either 4-TB or 8-TB capacities. The disk drives and the DDIC modules are hot-swappable and can be replaced on-site while the storage shelf is operational.

Disk drive slot numbering


Each disk drive drawer in a 5U84 storage shelf is divided into three compartments. The compartments contain the individual drive slots that hold the DDIC modules and the disk drives.

In the top drive drawer, the drive slots are numbered from left to right, beginning with the first compartment that is closest to the front panel. The drive slots in this compartment are numbered 0 to 13. The drive slots in the second compartment are in the middle of the drive drawer. These slots are numbered 14 to 27. The drive slots in third compartment are closest to the rear of the shelf. These slots are numbered 28 to 41.

In the bottom drive drawer, the drive slots are numbered from left to right, beginning with the first compartment that is closest to the front panel. The drive slots in this compartment are numbered 42 to 55. The drive slots in the second compartment are in the middle of the drive drawer. These slots are numbered 56 to 69. The drive slots in third compartment are closest to the rear of the shelf. These slots are numbered 70 to 83.

See [Figure 2-3](#) on page 41.

Figure 2-3 Disk drive slot numbering

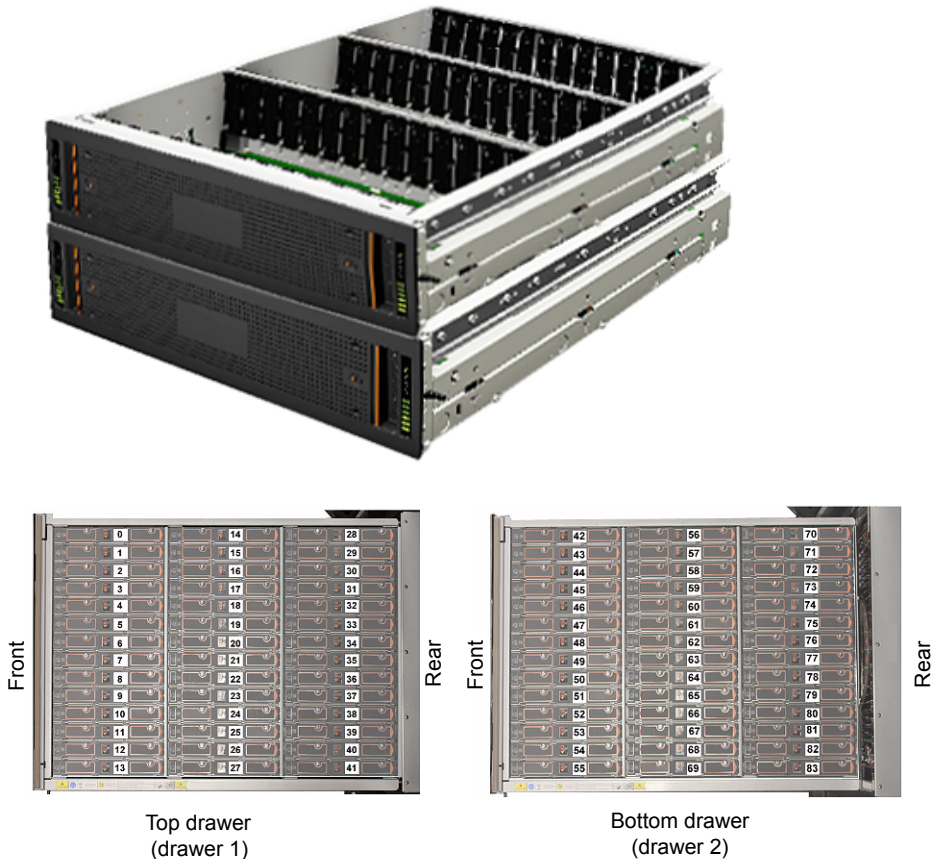

Disk Drive In Carrier (DDIC) modules

All storage shelf hard disk drives are housed in DDIC modules. Each disk drive drawer accepts a Disk Drive In Carrier (DDIC) module for each disk drive slot in the drawer. DDIC modules enable disk drives to be quickly inserted and removed without turning off the 5U84 storage shelves. In addition, each DDIC prevents mis-alignment and damage to the disk drive connectors during the disk drive insertion and removal process.

For troubleshooting purposes, DDIC modules provide one amber drive fault LED indicator per disk drive. The fault indicator enables you to easily identify a failed drive carrier in the drive drawer. You can see drive fault LED indicator when the disk drive drawer is open.

Figure 2-4 Disk Drive In Carrier (DDIC) module



Figure 2-5 Disk Drive In Carrier (DDIC) module components and locations

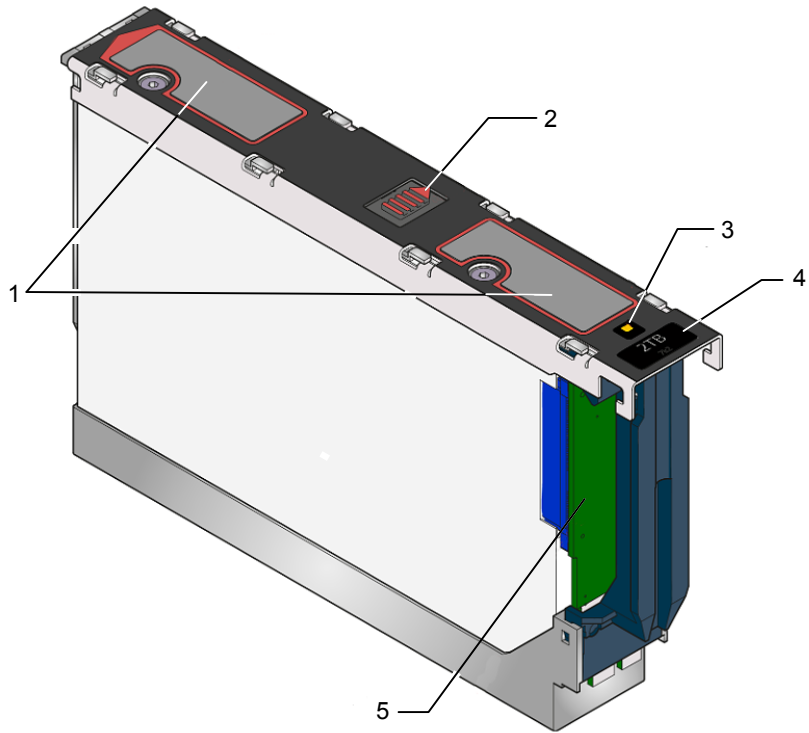


Table 2-2 5U84 Storage Shelf DDIC component locations

Number	Component
1	Grey touch points Note: Touch points are used to facilitate the removal of the DDIC module from the storage shelf drawer.
2	Latch button
3	Drive Fault LED
4	Disk drive capacity label
5	Dongle

Disk Drive Drawer printed circuit board (PCB) assemblies

Each disk drive drawer in a 5U84 storage shelf uses a printed circuit board (PCB) assembly to provide the electrical connectivity to the drawer's disk drives.

Along with providing the electrical connectivity to the disk drives, PCB assemblies also provide:

- Mounting platforms for the drawer cabling system
- Redundant power paths to each disk drive
- Redundant 12Gb/s SAS signal paths to each disk drive
- Provide technical feedback to the system when a drawer is opened or closed.

PCB assemblies include the following components:

- Three drawer Baseplane cards
- One right side Drawer Sideplane card
- One left side Drawer Sideplane card

Figure 2-6 Disk Drive Drawer PCB assembly

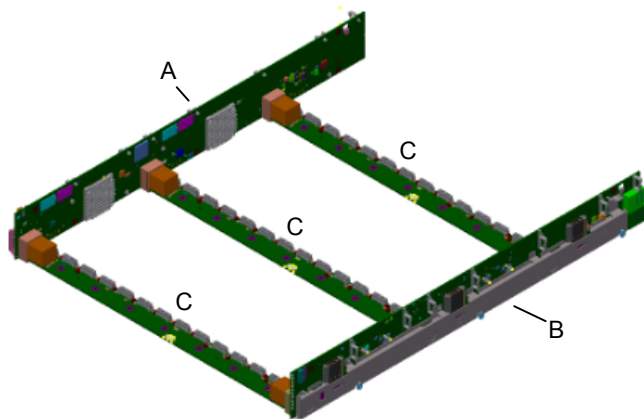


Table 2-3 Disk drive drawer PCB assembly components

Label	Item
A	Drawer Sideplane card (left)
B	Drawer Sideplane card (right)
C	Baseplane card


Each PCB assembly contains two Drawer Sideplane cards. One Sideplane card mounts on the right side of the disk drawer, while the other card mounts on the left side of the drawer.

Drawer Sideplane cards provide power paths to the drawer Baseplanes and the DDICs and their installed disk drives. Sideplane cards also provide 12Gb/s SAS connections.

Sideplane cards are hot swappable and replaceable by service personnel while the storage shelf is running in a rack.

Note: Removing the Sideplane upper metal cover removes power to the Sideplane, which enables the faulty Sideplane to be hot-swapped.


Figure 2-7 Inside and outside views of a right side Sideplane card

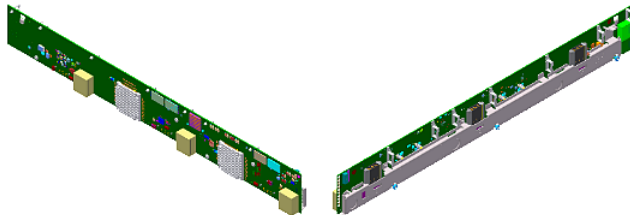

Three Drawer Baseplanes comprise each PCB assembly. Drawer Baseplanes provide a dual path for 12Gb/s SAS connectivity between the Drawer Sideplane cards and the DDICs. They also provide power to the DDICs from either the right or the left Drawer Sideplane cards.

The Drawer Baseplanes also provide four remote temperature sensing diodes that monitor disk drive temperatures within the disk drive drawers.

Figure 2-8 Drawer Baseplane example

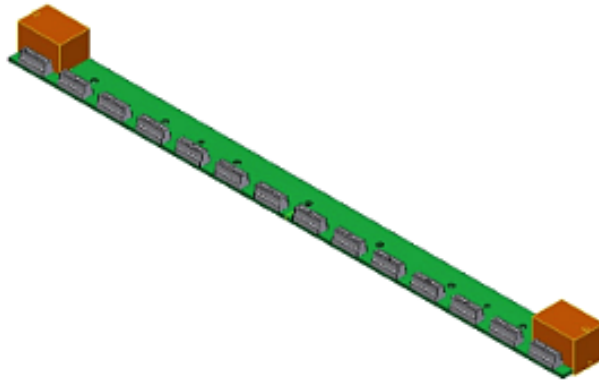

Drawer Sideplane Status panels

Drawer Sideplane Status panels are located on the front of the 5U84 storage shelves. These panels provide status and the activity information about the Sideplane card.

Figure 2-9 Drawer Sideplane Status panel locations

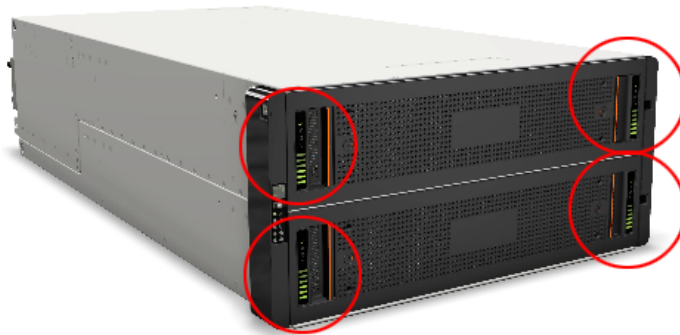


Figure 2-10 5U84 Primary Storage Shelf / 5U84 Expansion Storage Shelf
 Drawer Sideplane Status panel

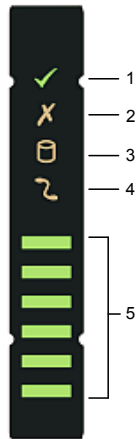


Table 2-4 Drawer Sideplane Status panel descriptions

Number	Item
1	Sideplane card OK / Power good
2	Sideplane card Fault
3	Logical Fault
4	Cable Fault
5	Activity Bar Graph

The following table describes the Drawer Sideplane LED statuses.

Table 2-5 Drawer Sideplane LED statuses

Status	Power (Green)	Drawer Fault (Amber)	Cable Fault (Amber)	Logical Fault (Amber)	Activity Bar Graph (Green)
Drawer Sideplane card OK / Power Good	On	Off	Off	Off	X
Drawer Sideplane card Fault	Off	On	X	X	Off

Table 2-5 Drawer Sideplane LED statuses (*continued*)

Status	Power (Green)	Drawer Fault (Amber)	Cable Fault (Amber)	Logical Fault (Amber)	Activity Bar Graph (Green)
Drive failure has occurred causing loss of availability or redundancy	On	On	X	X	X
Array in impacted state (SES) Indicated	On	X	X	Flashing	X
Cable Fault	Off	X	On	X	Off
Drive Activity	On	Off	Off	Off	On *


X = Disregard

* The Activity Bar Graph is a six-segment indicator that shows activity of the SAS disk drive interface to the Sideplane. If none of the segments are lit, then there is no SAS disk drive activity occurring. Increasing disk drive activity is measured upward, starting with the bottom segment to the top segment. When full disk drive activity occurs, all six segments are lit.

Drawer Sideplane hot swap LED indicators

Drawer Sideplane hot-swap LED indicator lights are mounted on each drawer's Sideplane printed circuit board assembly. They are visible through each Sideplane's metal frame when the drawer is open.

Figure 2-11 Drawer Sideplane hot-swap LED location

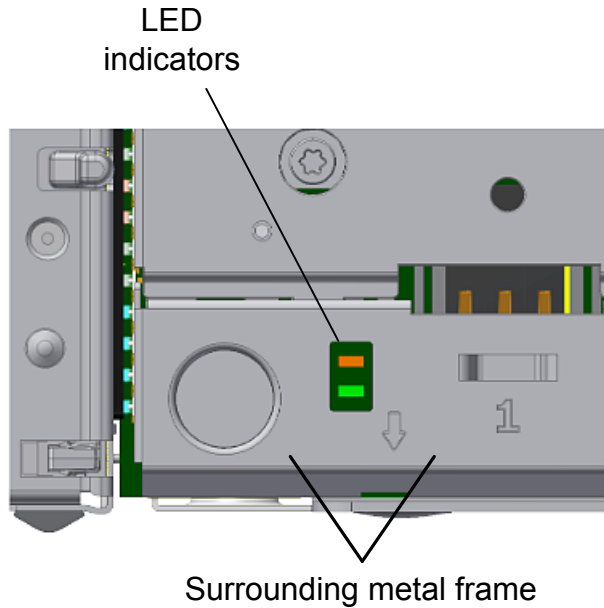

The following table describes the Drawer hot-swap Sideplane LED indicator statuses.

Table 2-6 Drawer Sideplane Hot-swap LED indicator statuses

Status	12V Power LED (Green)	Power disabled LED (Amber)
Sideplane 12V power present (DO NOT hot-swap the sideplane)	On	X
Sideplane 12V is disabled (OK to hot-swap the Sideplane)	Off	On

X = Disregard


5U84 Primary Storage Shelf and the 5U84 Expansion Storage Shelf control panel

The control panel is installed on the left side of both the 5U84 Primary Storage Shelf and the 5U84 Expansion Storage Shelf. It is functionally the same for both systems.

Figure 2-12 Control panel location



Figure 2-13 Control panel

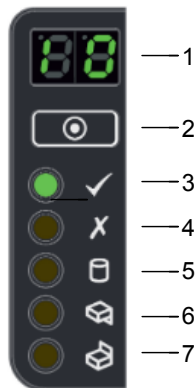

The following table describes the control panel functions.

Table 2-7 Control panel functions and descriptions

Number	Function	Description
1	Unit Identification Display	The Unit Identification Display is a dual digit display that provides information about the storage shelf. Its primary function is to assist in the configuration of multiple storage shelves that are connected to the appliance.
2	Input button	The Input button enables you to set the Unit Identification display number.
3	Power On / Standby LED (Green or Amber)	The Power On/Standby LED shows Amber when only standby power is available. Otherwise, the LED shows Green when system power is available.
4	Module Fault LED (Power Cooling Module, I/O module status) (Amber)	The Module Fault LED illuminates when there is a system hardware fault. The system hardware fault may be associated with a fault LED on a Power Cooling Module (PCM) or on an I/O module.
5	Logical Fault LED (Amber)	The Logical Status LED shows a change of status or a fault. Typically these changes of status or faults are associated with the shelf's disk drives. However, the Logical Status LED can also indicate an issue with an internal RAID controller or external RAID controller, or with a host bus adapter.
6	Top Drawer Fault (Amber)	The Top Drawer Fault LED (drawer 1) shows a change of status or a fault with the top disk drive drawer in the storage shelf.
7	Bottom Drawer Fault (Amber)	The Bottom Drawer Fault LED (drawer 2) shows a change of status or a fault with the bottom disk drive drawer in the storage shelf.

About the 5U84 Primary Storage Shelf and 5U84 Expansion Storage Shelf rear components

This section describes the rear components of the 5U84 Primary Storage Shelf and 5U84 Expansion Storage Shelves.

The 5U84 Primary Storage Shelf and the 5U84 Expansion Storage Shelf contain the following removable rear components:

- RAID Controllers (*5U84 Primary Storage Shelf only*)
- Expansion I/O modules (*5U84 Expansion Storage Shelf only*)

- Fan modules
- Power Supply Units (PSUs)

Figure 2-14 5U84 Primary Storage Shelf rear components

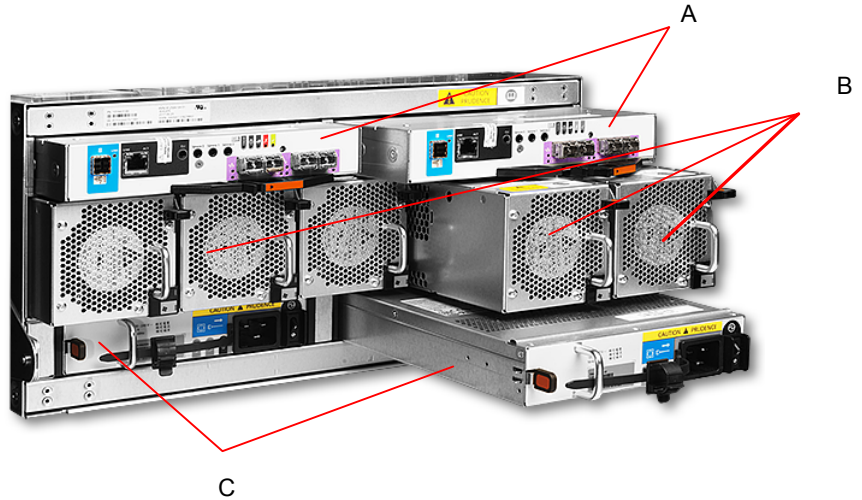


Table 2-8 5U84 Primary Storage Shelf rear component locations

Letter	Item
A	RAID Controllers (from left to right) RAID Controller A, RAID Controller B
B	Fan modules (from left to right) Fan Module 0, Fan Module 1, Fan Module 2, Fan Module 3, and Fan Module 4
C	Power Supply Units (from left to right) PSU 0, PSU 1

Figure 2-15 5U84 Expansion Storage Shelf rear components

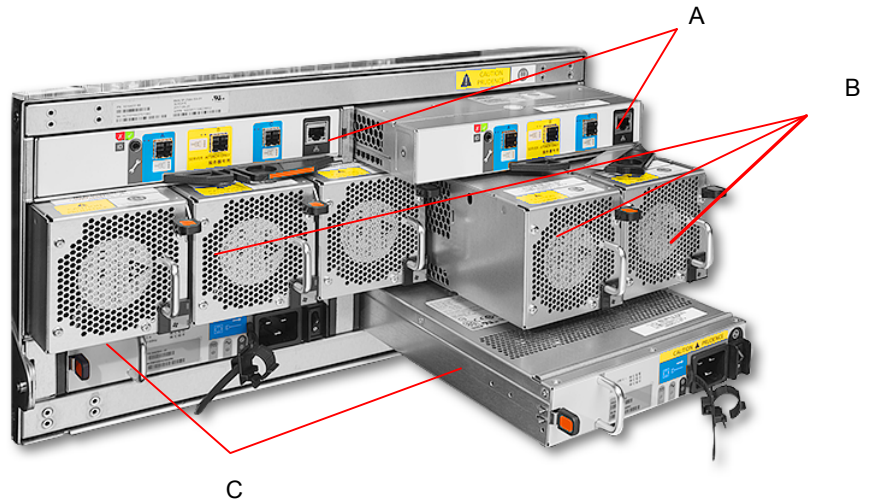


Table 2-9 5U84 Expansion Storage Shelf rear component locations

Letter	Item
A	Expansion I/O modules (from left to right) Expansion I/O Module A, Expansion I/O Module B
B	Fan modules (from left to right) Fan Module 0, Fan Module 1, Fan Module 2, Fan Module 3, and Fan Module 4
C	Power Supply Units (from left to right) PSU 0, PSU 1

5U84 Primary Storage Shelf

The 5U84 Primary Storage Shelf uses two RAID controllers, which are located in the top two slots of the back panel. The RAID controllers provide RAID data protection technology for the data that is stored on the 5U84 Primary Storage Shelf disk drives. The RAID controllers also provide RAID data protection technology for the optional 5U84 Expansion Storage Shelves that you connect to the 5U84 Primary Storage Shelf.

Fiber optic cables connect the NetBackup 5340 Appliance compute node to the 5U84 Primary Storage Shelf through the storage shelf's RAID controllers.

Five high performance fan modules connect to the storage shelf's midplane connector through the middle slots. Each fan module contains two contra-rotating high performance fans, along with separate power and control circuits for each internal fan.

Two redundant Power Supply Units (PSUs) are located in slots beneath the fan modules.

To operate, the 5U84 Primary Storage Shelf must have at least one functioning RAID Controller, one functioning power supply unit, and four functioning fan modules.

5U84 Expansion Storage Shelf

The 5U84 Expansion Storage Shelf uses two Expansion I/O modules, which are located in the top two slots of the back panel. The Expansion I/O modules provide SAS3 I/O data transfers between the 5U84 Primary Storage Shelf and the 5U84 Expansion Storage Shelf. The Expansion I/O modules also provide I/O data transfers between the first 5U84 Expansion Storage Shelf and up to two additional 5U84 Expansion Storage Shelves.

SAS3 cables connect the 5U84 Expansion Storage Shelf to the 5U84 Primary Storage Shelf through the 5U84 Expansion Storage Shelf's Expansion I/O modules. SAS3 cables are also used to daisy chain up to two additional 5U84 Expansion Storage Shelves to the first 5U84 Expansion Storage Shelf.

Five high performance fan modules connect to the storage shelf's midplane connector through the middle slots. Each fan module contains two contra-rotating, high performance fans, along with separate power and control circuits for each internal fan. The device must have at least one functioning RAID Controller, one functioning power supply module, and one functioning fan module.

Two redundant Power Supply Units (PSUs) are located in slots beneath the fan modules.

To operate, the 5U84 Expansion Storage Shelf must have at least one functioning Expansion I/O module, one functioning PSU, and four functioning fan modules.

See ["Veritas 5U84 Expansion Storage Shelf Expansion I/O modules"](#) on page 58.

Veritas 5U84 Primary Storage Shelf RAID Controllers

The Veritas 5U84 Primary Storage Shelf uses dual, hot swappable RAID Controllers. These controllers create and manage the 5U84 Primary Storage Shelf disk drive RAID arrays that contain backed up data. They also create and manage the RAID disk drive arrays on 5U84 Expansion Storage Shelves when those are attached to the 5U84 Primary Storage Shelf.

The RAID Controllers run RAID levels 6 and 10 on the storage shelf. RAID 10 is also referred to as RAID 1+0. RAID 6 offers the highest level of data protection. It

allows simultaneous write operations, while also allocating two sets of parity data across the drives that comprise the RAID 6 array.

RAID 10 uses mirroring and striping technology without the use of parity. It enables the creation of large high performance disk groups for data storage purposes, while also providing the fault tolerance protection that mirroring offers.

The RAID Controllers also provide one SAS3 port. The SAS3 port enables data to flow at SAS3 data transfer rates between the 5U84 Primary Storage Shelf and the first optional 5U84 Expansion Storage Shelf.

Figure 2-16 Veritas 5U84 Primary Storage Shelf RAID Controllers



The following figure and table provides component details for the Veritas 5U84 Primary Storage Shelf RAID Controller modules.

Figure 2-17 Veritas 5U84 Primary Storage Shelf RAID Controller components and locations

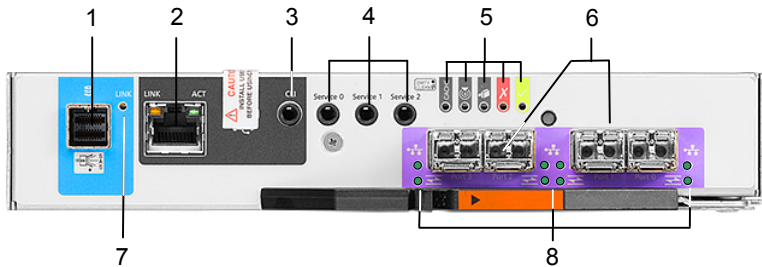


Table 2-10 RAID Controller component locations

Number	Component
1	SAS3 port
2	Ethernet port
3	USB port
4	Serial ports (Service only)
5	Indicator LEDs

Table 2-10 RAID Controller component locations (*continued*)

Number	Component
6	16Gb Fibre Channel ports
7	Activity LED
8	Activity LEDs

The following figure and table provides RAID Controller indicator LED details for the Veritas 5U84 Primary Storage Shelf RAID Controller modules.

Figure 2-18 Veritas 5U84 Primary Storage Shelf RAID Controller indicator LED details

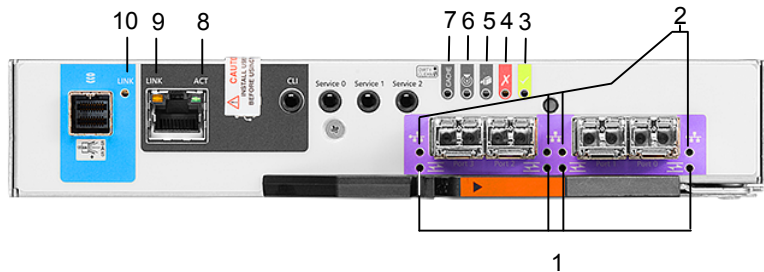


Table 2-11 RAID Controller indicator LED descriptions and definitions

LED	Description	Definition
1	Host 4/8/16Gb Fibre Channel ¹ Link Status / Link Activity	Off - No link detected. Green- The port is connected and the link is up. Blinking green - The link has I/O activity.
2	Host 10GbE iSCSI ^{2,3} Link Status / Link Activity	Off - No link detected. Green- The port is connected and the link is up. Blinking green - The link has I/O activity or replication activity.
3	OK	Off - A controller issue has been detected, or the controller is turned off. Blinking green - The system is starting. Green - The controller is operating normally.

Table 2-11 RAID Controller indicator LED descriptions and definitions
(continued)

LED	Description	Definition
4	Fault	Off - The controller is operating normally. Amber - A controller fault has been detected or a service action is required. Blinking amber - Hardware-controller power on error, or a cache flush or restore error.
5	OK to Remove	Off - The controller is not prepared for removal. Blue - The controller is prepared for removal.
6	Identify	White - The controller is being identified.
7	Cache Status ⁴	Off - In a working controller, the cache is clean (contains no unwritten data). This is an occasional condition that occurs while the system is booting. Green - The cache is dirty (contains unwritten data) and the operation is normal. The unwritten information can be the log data or the debug data that remains in the cache. By itself, a Green cache status LED does not indicate that any user data is at risk or that any action is necessary. Blinking Green - A Compact Flash flush or a cache self-refresh is in progress, indicating cache activity.
8	Network Port Link Activity Status ⁵	Off - The Ethernet link is not established, or the link is down. Green - The Ethernet link is up (applies to all negotiated link speeds).
9	Network Port Link Speed ⁵	Off - The link is up at 10/100base-T negotiated speeds. Amber - The link is up and negotiated at 1000base-T speed.
10	Expansion Port Status	Off - The port is empty or the link is down. Green - The port is connected and the link is up.

Table 2-11 RAID Controller indicator LED descriptions and definitions
(continued)

LED	Description	Definition
		¹ When in Fibre Channel mode, the SFPs must be qualified 8Gb or 16Gb fiber optic option. A 16Gb/s SFP can run at 16Gb/s, 8Gb/s, or 4Gb/s, or auto-negotiate its link speed. An 8Gb/s SFP can run at 8Gb/s, 4Gb/s, or auto-negotiate its link speed.
		² When in 10GbE iSCSI mode, the SFPs must be a qualified 10GbE iSCSI optic option.
		³ When turning on and starting, the iSCSI LEDs will be on/blinking momentarily. They then switch to the mode of operation.
		⁴ Cache Status LED support power on behavior and operational (cache status) behavior.
		⁵ When the port is down, both LEDs are off.

Veritas 5U84 Expansion Storage Shelf Expansion I/O modules

Veritas 5U84 Expansion Storage Shelf Expansion I/O modules provide SAS3 data throughput and communications between one or more 5U84 Expansion Storage Shelves.

Figure 2-19 Veritas 5U84 Expansion Storage Shelf Expansion I/O module



Figure 2-20 Veritas 5U84 Expansion Storage Shelf Expansion I/O module

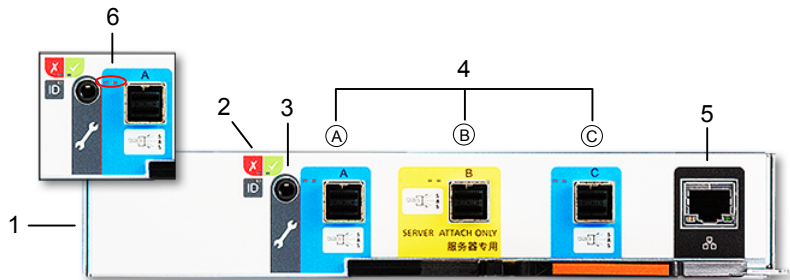


Table 2-12 Expansion I/O module components and locations

Number	Component
1	Expansion I/O module
2	Expansion I/O module Status LEDs
3	RS232 jack (debugging purposes only)
4	SAS3 ports - A, B, and C
5	Ethernet port (debugging purposes only)
6	SAS Activity LEDs

Expansion I/O module Status LED location and conditions




This section discusses the location of the Status LEDs on the Expansion I/O modules and the Status LED conditions.

Figure 2-21 Expansion I/O module Status indicator LED location

I/O module Status LED location



Table 2-13 Expansion I/O module icon and Status LED conditions

Condition	Activity LED (green)	Fault LED (amber)
 Module Fault (amber)	On Off	The Expansion I/O module has encountered a fault condition. The Expansion I/O module is operating normally.
 Power (green)	On Off	The Expansion I/O module is on. The Expansion I/O module is off.
 ID (blue)	On	The Expansion I/O module is being identified.

Expansion I/O module SAS Activity LED location and conditions

This section discusses the location of the SAS Activity LEDs on the Expansion I/O modules and the SAS Activity LED conditions.

Figure 2-22 Expansion I/O module SAS Activity LED location

SAS Activity LED location

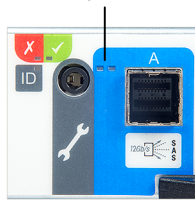


Table 2-14 Expansion I/O module SAS Activity LED conditions

Condition	Activity LED (green)	Fault LED (amber)
No Cable Present	Off	Off
Cable Present	On	Off
All links up, no activity.		

Table 2-14 Expansion I/O module SAS Activity LED conditions (*continued*)

Condition	Activity LED (green)	Fault LED (amber)
Cable Present All links up.	Flash with aggregate port activity	Off
Critical Fault <ul style="list-style-type: none"> ■ Any fault which causes operation of the cable to cease or fail to start For example, an OVERCURRENT trip. ■ No connection detected at the opposite end of the SAS cable 	Off	On
Non-Critical Fault Any fault which does not cause the connection to cease operation. For example, not all links established; OVERTEMPERATURE condition detected.	Flash with aggregate port activity	Flashing - One second on; one second off

Veritas 5U84 Storage Shelf cooling modules

The Veritas 5U84 Storage Shelves include five cooling modules. The cooling modules provide cooling to the entire unit, which is suitable to maintain the internal component temperatures below each components maximum temperature limits.

Figure 2-23 Veritas 5U84 Storage Shelf cooling module components

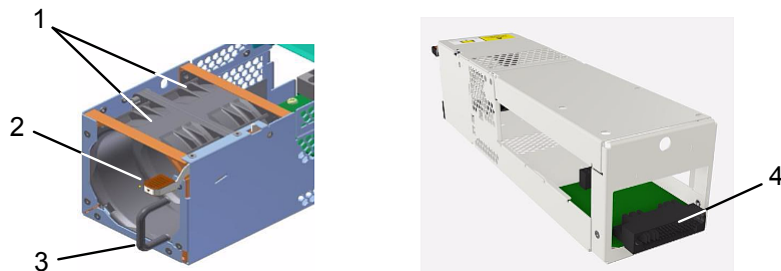


Table 2-15 Veritas 5U84 Storage Shelf cooling module component locations

Number	Component
1	High performance, contra-rotating cooling fans
2	Release latch
3	Handle
4	Mid-plane connector

cooling modules provide:

- Fast removal and replacement times without the need to turn off the storage shelf.
- Electronic fan speed control to the fans.
- Redundant serial interface connections to the rest of the storage shelf system.
- Cooling module redundancy
- Redundancy includes:
 - Maintaining the cooling function of the cooling module in the event of a single fan rotor failure.
 - Maintaining the normal operation of the cooling module if one cooling control or fan controller module fails.
 - Automatically switching fan speeds to Full/High mode if the cooling module control unit fails.
 - Maintaining the normal operation of the storage shelf for two minutes when a cooling module is swapped out due to a failure.


5U84 Storage Shelf Power Supply Units

Veritas 5U84 Storage Shelves includes dual Power Supply Units (PSU) that provide redundant power to the storage shelves. If one PSU fails, the storage shelves continue to operate as the second PSU continues to supply the storage shelf with power.

PSUs are hot-swappable. You can replace a faulty PSU while the storage shelf is running. However, you must complete the PSU replacement procedure within **two minutes** after you remove the faulty PSU.

Veritas 5U84 Storage Shelf chassis are keyed to prevent PSUs from being inserted upside down.

Figure 2-24 5U84 Storage Shelf Power Supply Unit

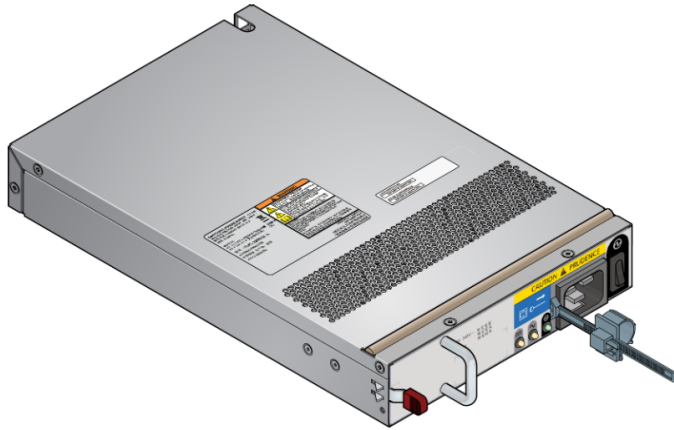

The rear panel of the PSU includes a power switch, three status LEDs, and an AC socket for the power cord. The rear panel also includes a handle that you use during the PSU insertion and removal process.

Figure 2-25 5U84 Storage Shelf Power Supply Unit

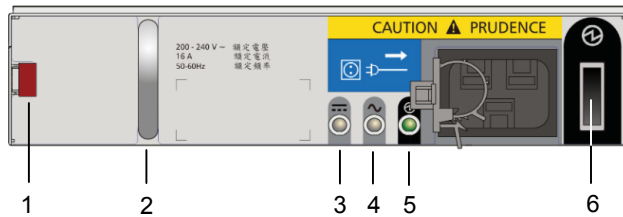


Table 2-16 5U84 Storage Shelf Power Supply Unit component locations

Number	Component
1	Release latch
2	Handle
3	PSU Fail LED
4	AC Fail LED
5	Power OK LED
6	Power switch

NetBackup 5340 Appliance and 5U84 Storage Shelf cables

This chapter includes the following topics:

- [Power cables](#)
- [Network cable](#)
- [Multi-mode fiber optic cable](#)
- [SAS3 cable](#)
- [Twinaxial copper cables](#)

Power cables

Each of the AC power modules in both the NetBackup 5340 Appliance and the required Veritas 5U84 Primary Storage Shelf accept one AC power cable. The optional 5U84 Expansion Storage Shelf also uses one AC power cord in each of its AC power modules. One end of the AC power cable connects to the power supply on the appliance or the storage device. The other end of the cable connects to an external Power Distribution Unit (PDU) on the rack.

Power cables include a live line, a neutral line, and a grounding line.

NetBackup 5340 Appliance AC power cable

Figure 3-1

AC power cable - NetBackup 5340 Appliance



- A AC power connector (IEC-60320-C14) to an external power supply such as a Power Distribution Unit (PDU) on a rack.
- B AC power connector (IEC-60320-C13) to an appliance.


Cable rating: 15A 250V

Note: If your power distribution unit is not compatible with the IEC-60320-C14 plug, Veritas recommends that you purchase your power cable locally. Make sure that the power cable meets or exceeds the indicated power rating.

See [“NetBackup 5340 compute node technical specifications”](#) on page 72.

Veritas 5U84 Primary Storage Shelf / Expansion Storage Shelf AC power cable

Figure 3-2 AC power cable - Veritas 5U84 Primary Storage Shelf / Expansion Storage Shelf

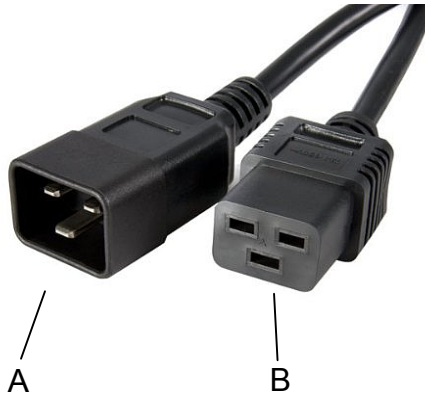

- A AC power connector (IEC-60320-C20) to an external power supply such as a Power Distribution Unit (PDU) on a rack.
- B AC power connector (IEC-60320-C19) to storage shelf.

Cable rating: 20A 250V

Note: If your power distribution unit is not compatible with the IEC-60320-C20 plug, Veritas recommends that you purchase your power cable locally. Make sure that the power cable meets or exceeds the indicated power rating.

See “[Veritas 5U84 Storage Shelf technical specifications](#)” on page 75.

See “[Network cable](#)” on page 66.

See “[Multi-mode fiber optic cable](#)” on page 67.

See “[SAS3 cable](#)” on page 68.


See “[Twinaxial copper cables](#)” on page 69.

Network cable

The NetBackup appliance communicates with the Ethernet networks through an Ethernet network cable. One end of the network cable connects to the management network port or service network port of the appliance. The other end of the cable

connects to the network switch or an external gateway. Both ends of the cable are RJ45 connectors.

Figure 3-3 Network cable

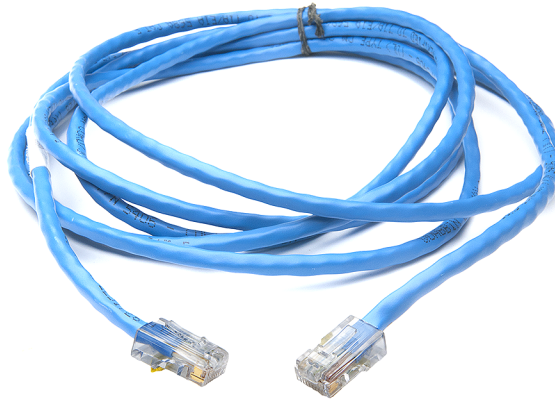


See [“Power cables”](#) on page 64.

See [“SAS3 cable”](#) on page 68.


See [“Twinaxial copper cables”](#) on page 69.

Multi-mode fiber optic cable

A NetBackup Appliance compute node communicates with the required 5U84 Primary Storage Shelf through multi-mode fiber optic cables. One end of each fiber optic cable connects to PCIe-based 16Gb Fibre Channel host bus adapters that are installed in the compute node. The other end of the fiber optic cable connects to the 5U84 Primary Storage Shelf's 5005 RAID Controller. Both ends of the fiber optic cable use LC connectors.

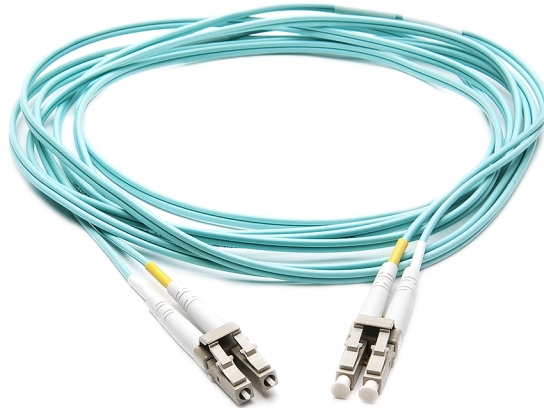Figure 3-4 Multi-Mode fiber cable

Fiber optic cables require Small Form-factor Pluggable (SFP+) transceivers, which are provided with each device having Fibre Channel ports. The diagram shows the SFP, labeled 1, and the fiber optic cable which is attached to it, labeled 2.

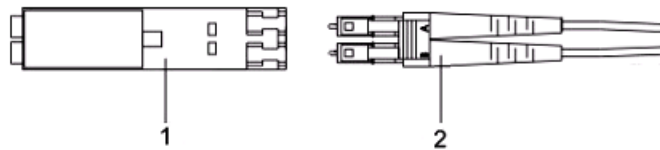

Supported SFPs are listed:

- Finisar
- JDSU

See [“Power cables”](#) on page 64.

See [“Network cable”](#) on page 66.

See [“SAS3 cable”](#) on page 68.

See [“Twinaxial copper cables”](#) on page 69.

SAS3 cable

SAS3 data cables are used to connect the 5U84 Primary Storage Shelf to an optional Veritas 5U84 Expansion Storage Shelf. SAS3 cables also connect multiple 5U84

Expansion Storage Shelves to each other. SAS3 cables have SAS3 connectors on both ends. Two SAS3 cables ship with each Veritas 5U84 Expansion Storage Shelf.

Figure 3-5 SAS3 cable



See [“Power cables”](#) on page 64.

See [“Network cable”](#) on page 66.

See [“Multi-mode fiber optic cable”](#) on page 67.

See [“Twinaxial copper cables”](#) on page 69.

Twinaxial copper cables

The NetBackup appliance communicates with Ethernet networks that run the iSCSI protocol through high speed Twinaxial copper cables. If you configure the appliance to communicate with 10 Gb Ethernet iSCSI networks, these cables connect to the iSCSI card in the appliance.

These cables are also known as Direct-Access copper cables, and are available in 1-meter, 3-meter, or 5-meter lengths.



See [“Power cables”](#) on page 64.

See [“Network cable”](#) on page 66.

See [“Multi-mode fiber optic cable”](#) on page 67.

See [“SAS3 cable”](#) on page 68.

Technical specifications, Environmental/Protocol standards, and Compliance standards

This appendix includes the following topics:

- [NetBackup 5340 compute node technical specifications](#)
- [Veritas 5U84 Storage Shelf technical specifications](#)
- [Environmental specifications](#)
- [Protocol standards](#)
- [Regulatory, compliance, and certification information](#)

NetBackup 5340 compute node technical specifications

Table A-1 NetBackup 5340 Appliance compute node technical specifications

Technical Specification	NetBackup 5340 Appliance
Rack information	<p>19" EIA standard</p> <p>The rack rails that are provided for the NetBackup 5340 Appliance compute node are extensible to 36" (914mm). This distance is the maximum depth that is allowed between rack posts. If the distance between rack posts is longer than 36" (914mm) the rails and the appliance cannot be properly installed.</p>
Processor	Two Intel Xeon 6138 CPUs
CPU speed	2.0 GHz (Turbo: 3.7 GHz)
Cores	40 (20 per processor)
Cache	27.5 MB Cache L3
Memory type and configuration (RDIMMs)	<p>Base memory capacity: 768GB, expandable to 1.5TB</p> <p>Memory type: DDR4 RDIMM</p> <p>Configuration: 32GB x 24 RDIMM modules</p> <p>Operating voltage: 1.2V</p> <p>Configured clock speed: 2666MHz</p>
SAS RAID mezzanine card	Yes
SAS RAID PCIe card installed in a appliance compute node PCIe riser assembly	No
RAID levels	<p>RAID10 (striping and mirroring) and RAID6 (block level striping with double distributed parity) are used as follows:</p> <ul style="list-style-type: none"> ■ RAID10: NetBackup 5340 Appliance compute node system disks <p>Note: RAID levels are generated using an onboard Intel RSMHC080 RAID controller that is installed in the NetBackup 5340 Appliance compute node.</p>

Table A-1 NetBackup 5340 Appliance compute node technical specifications
(continued)

Technical Specification	NetBackup 5340 Appliance	
Usable MSDP and AdvancedDisk storage capacity (TB)	AdvancedDisk storage capacity: up to 1920TB MSDP storage capacity: up to 916TB See “Available appliance storage options” on page 37.	
Maximum number of storage shelves	4 One Veritas 5U84 Primary Storage Shelf; three Veritas 5U84 Expansion Storage Shelves	
I/O ports See “Standard available NetBackup 5340 Appliance PCIe-based I/O configurations” on page 24. See “Total NetBackup 5340 Appliance On-board and PCIe-based I/O ports” on page 26.	16Gb Fibre Channel ports (PCIe-based)	4 Used to connect the NetBackup 5340 Appliance compute node to the 5U84 Primary Storage Shelf
	10Gb Ethernet/iSCSI-capable ports (PCIe-based)	Up to 10, depending on the appliance I/O configuration
	8Gb Fibre Channel ports (PCIe-based)	Up to eight, depending on the appliance I/O configuration
	1Gb Ethernet ports (on-board)	4

Table A-1 NetBackup 5340 Appliance compute node technical specifications
(continued)

Technical Specification	NetBackup 5340 Appliance
Dimensions (IEC rack compliant)	<p>Appliance compute node:</p> <ul style="list-style-type: none"> ■ Height: 8.89cm (3.5") (approximately 2U) ■ Width: 48.26cm (19") ■ Depth: 79.38cm (31.25") <p>5U84 Primary and 5U84 Expansion Storage Shelves:</p> <ul style="list-style-type: none"> ■ Height: 22.23cm (8.75") (approximately 5U - shelf, overall) ■ Width: 48.26cm (19") (across the mounting flange) ■ Length/depth: 93.35mm (36.75") (from rear of the front flanges to the rear extremity of the chassis) <p>Note: The lengths of the Veritas 5U84 Storage Shelves are longer than what a standard IEC-compliant rack normally supports. Due to the additional length, the rack-based PDU hardware may need to be installed on the outside of the rack to accommodate the storage shelves.</p>
Maximum weight	Appliance compute node: 23.26 kg (51.28 lbs)
AC power requirements	<p>Appliance compute node:</p> <ul style="list-style-type: none"> ■ 220 VAC at 3.1 A
Power factor	> 90%
AC power cable	<p>Specification: IEC-60320-C14 to IEC-60320-C13, 10A/250V, Black, 4 ft</p> <p>The IEC-60320-C14 plugs into a Power Distribution Unit. The IEC-60320-C13 plugs into an appliance or storage shelf power supply.</p> <p>Note: If your power distribution unit is not compatible with the IEC-60320-C14 plug, then Veritas recommends that you purchase your power cable locally. Make sure the power cable meets or exceeds the indicated power rating.</p>
AC Frequency range	50/60Hz
Typical power consumption	<p>Appliance compute node:</p> <ul style="list-style-type: none"> ■ 300 watts

Table A-1 NetBackup 5340 Appliance compute node technical specifications
(continued)

Technical Specification	NetBackup 5340 Appliance
Typical power consumption with a maximum of four external storage shelves	4,300 watts (2.2 watts per TB)
Maximum power consumption with a maximum of four external storage shelves	5,800 watts (3.0 watts per TB)
System cooling requirement (heat dissipation) (Appliance with maximum storage shelves attached)	Typical: <ul style="list-style-type: none"> ■ 14,408 BTU/hour Maximum: <ul style="list-style-type: none"> ■ 19,267 BTU/hour
Operating voltage	100V - 127 VAC 200V - 240 VAC
Power conversion efficiency	90% +
Acoustic noise	70 dBA

See “[Veritas 5U84 Storage Shelf technical specifications](#)” on page 75.

See “[Environmental specifications](#)” on page 78.

See “[Protocol standards](#)” on page 78.

See “[Regulatory, compliance, and certification information](#)” on page 79.

Veritas 5U84 Storage Shelf technical specifications

The following table provides technical specifications for both the Veritas 5U84 Primary Storage Shelf and the Veritas 5U84 Expansion Storage Shelf.

Table A-2 Veritas 5U84 Primary Storage Shelf / 5U84 Expansion Storage Shelf technical specifications

Technical specification	Description
Rack information	The rack installation height is the space occupied by a storage shelf in a rack cabinet. The shelf fits into a 5U rack space. Install the storage shelf in a rack cabinet that is 19 inches (483mm) wide.
Dimensions (IEC rack compliant)	Height: 22.23cm (8.75") (approximately 5U - shelf, overall) Width: 48.26cm (19") (across the mounting flange) Length/depth: 93.35cm (36.75") (from rear of the front flanges to the rear extremity of the chassis) Note: The lengths of the Veritas 5U84 Storage Shelves are longer than what a standard IEC-compliant rack normally supports. Due to the additional length, the rack-based PDU hardware may need to be installed on the outside of the rack to accommodate the storage shelves.
Hot swappable components	Disk drives, power supply units (PSUs), cooling modules, RAID Controllers, Expansion I/O modules
Usable storage capacity (TB)	Up to 1920TB, depending on the hardware configuration you purchase See "Available appliance storage options" on page 37.
Maximum system weight	316.67 lb (143.64 Kg) -- includes disk drives and a rack kit
Device types supported	Dual ported 12Gb/s SAS
Maximum drives per storage shelf	84
Typical power consumption	1000 watts per storage shelf Note: You can connect a maximum of four storage shelves to the 5340 Appliance.
Controller	5U84 Primary Storage Shelf: Dual 12Gb SAS RealStor 5005 RAID controllers per storage shelf 5U84 Expansion Storage Shelf: Dual Storage Bridge Bay (SBB) 2.1 compatible Expansion I/O modules per storage shelf
Host/Expansion Interface	Three universal x4 12Gb mini-SAS connectors (SFF-8644) per Expansion I/O module

Table A-2 Veritas 5U84 Primary Storage Shelf / 5U84 Expansion Storage Shelf technical specifications (*continued*)

Technical specification	Description
Maximum output power	2214W maximum continuous output power at high line voltage You can connect up to four storage shelves to the 5340 Appliance compute node.
AC power requirements	6.67 A at 200 - 240 VAC
Operating voltage	200V - 240 VAC
AC Frequency range	50/60Hz
Power conversion efficiency	81% @ 10% load 89% @ 20% load 93% @ 50% load 90% @ 100% load
Temperature Range	Operating: 5° to 35°C (de-rate 5°C above 2,133m (7,000')) (41°F TO 95°F) Non-operating: -40°C to 70°C (-40°F TO 158°F)
Relative humidity	Operating: 20%rh to 80%rh non-condensing Non-operating: 5%rh to 100%rh non-condensing
Acoustic noise	Sound Power Operating ≤ 8.0 Bels LWAd @ 23°
Operating altitude	-30 to 3048m (-100 to 10000ft) De-rate 5°C above 2134m (7000ft)
Non-operating altitude	-305 to 12192m (-1000 to 40000ft)
Operational vibration	0.21gRMS 5-500Hz Random
Operational shock	5g10ms ½ Sine
Relocation vibration (Non-operational)	0.3g2-200-2Hz Swept Sine.
Non-operational vibration	1.04 gRMS 2-200Hz Random.
Non-operational shock	30g10ms ½ Sine (Z-axis) 20g10ms ½ Sine(X-and Y-axes)

See [“NetBackup 5340 compute node technical specifications”](#) on page 72.

See [“Environmental specifications”](#) on page 78.

See [“Protocol standards”](#) on page 78.

See [“Regulatory, compliance, and certification information”](#) on page 79.

Environmental specifications

Table A-3 NetBackup 5340 Appliance / Veritas 5U84 Primary/Expansion Storage Shelf environmental specifications

Specification	NetBackup 5340 Appliance / Veritas 5U84 Primary/Expansion Storage Shelf
Operating temperature	ASHRAE A2 (10°C to 35°C) (50°F to 95°F)
Non-operating temperature	-25°C to 70°C (-14°F to 158°F) The non-operating temperature is defined as the temperature of the system when the system is turned off. It is also referred to as the storage temperature. Veritas recommends that you do not store the system in an environment where the temperatures fall outside of the listed temperature range.
Operating humidity (RH)	20% RH to 80% RH
Non-operating humidity	8% RH to 90% RH
Operating altitude (feet)	-30 to 3000 m with ASHRAE A2 class derating (0 to 10,000 ft)
Temperature gradient (per hour)	10°C/h (50°F/h)

See [“NetBackup 5340 compute node technical specifications”](#) on page 72.

See [“Veritas 5U84 Storage Shelf technical specifications”](#) on page 75.

See [“Protocol standards”](#) on page 78.

See [“Regulatory, compliance, and certification information”](#) on page 79.

Protocol standards

The following table provides standards with which the NetBackup 5340 Appliance and the Veritas 5U84 Primary/Expansion Storage Shelf comply.

Table A-4 NetBackup 5340 Appliance / Veritas 5U84 Primary/Expansion Storage Shelf standards compliance

Standard	Version
IPMI 2.0	Intelligent Platform Management Interface Specification Second Generation v2.0, Document Revision 1.0
SMBIOS	System Management BIOS (SMBIOS) Reference Specification, Version 2.5
SAS	SAS3
ACPI	Advanced Configuration and Power Interface Specification, Revision 3.0, September 2
IP	RFC0791: Internet Protocol
FC	INCITS T11 (X3T9.3)
PCIe	PCIe 3.0

See [“NetBackup 5340 compute node technical specifications”](#) on page 72.

See [“Veritas 5U84 Storage Shelf technical specifications”](#) on page 75.

See [“Environmental specifications”](#) on page 78.

See [“Regulatory, compliance, and certification information”](#) on page 79.

Regulatory, compliance, and certification information

The following sections give information about the product regulations and compliance.



WARNING

To ensure regulatory compliance, you must adhere to the assembly instructions in this guide to ensure and maintain compliance with existing product certifications and approvals. Use only the described, regulated components that are specified in this guide. Use of other products or components voids the UL listing and other

regulatory approvals of the product. The result is noncompliance with product regulations in the region(s) in which the product is sold.

Before computer integration make sure that the appliance, power supply, and other modules have passed EMC testing. This process helps to ensure EMC compliance with your local regional rules and regulations. The testing is done using a server board with a microprocessor from the same family (or higher) and operating at the same (or higher) speed as the microprocessor that is used on this server board. The final configuration of your appliance product may require additional EMC compliance testing.

This product is an FCC Class A device. Integration of it into a Class B system does not result in a Class B device.

Product regulatory compliance

The NetBackup appliance, when correctly integrated per this guide, complies with the following safety and electromagnetic compatibility (EMC) regulations.

Intended Application - This product was evaluated as Information Technology Equipment (ITE), which may be installed in offices, schools, computer rooms, and similar commercial type locations. The suitability of this product for other product categories and environments, other than an ITE application, may require further evaluation. Other product categories and environments may include medical, industrial, telecommunications, NEBS, residential, alarm systems, and test equipment.

Product safety compliance

The following is a list of product safety compliance norms for different countries:

- UL60950 - CSA 60950 (USA / Canada)
- EN60950 (Europe)
- IEC60950 (International)
- CB Certificate & Report, IEC60950 (report to include all country national deviations)
- GS Certification (Germany)
- GOST R 50377-92 - Certification (Russia)
- Belarus Certification (Belarus)
- Ukraine Certification (Ukraine)
- CE - Low Voltage Directive 73/23/EEE (Europe)

- IRAM Certification (Argentina)
- GB4943- CNCA Certification (China)

Product EMC Compliance - Class A Compliance

The following is a list of EMC compliance norms for different countries:

- FCC /ICES-003 - Emissions (USA/Canada) Verification
- CISPR 22 - Emissions (International)
- EN55022 - Emissions (Europe)
- EN55024 - Immunity (Europe)
- EN61000-3-2 - Harmonics (Europe)
- EN61000-3-3 - Voltage Flicker (Europe)
- CE - EMC Directive 89/336/EEC (Europe)
- VCCI Emissions (Japan)
- AS/NZS 3548 Emissions (Australia / New Zealand)
- BSMI CNS13438 Emissions (Taiwan)
- GOST R 29216-91 Emissions (Russia)
- GOST R 50628-95 Immunity (Russia)
- Belarus Certification (Belarus)
- Ukraine Certification (Ukraine)
- GB 9254 - CNCA Certification (China)
- GB 17625 - (Harmonics) CNCA Certification (China)

Product ecology compliance

Use of banned substances are restricted in accordance with world-wide regulatory requirements. A Material Declaration Data Sheet is available.

- Use of banned substances are restricted in accordance with world-wide regulatory requirements. A Material Declaration Data Sheet is available.
 - Quantity limit of 0.1% by mass (1000 PPM) for: Lead, Mercury, Hexavalent Chromium, Polybrominated Biphenyls Diphenyl-Ethers (PBB/PBDE)
 - Quantity limit of 0.01% by mass (100 PPM) for: Cadmium

- California Code of Regulations, Title 22, Division 4.5, Chapter 33: Best Management Practices for Perchlorate Materials
- China - Restriction of Hazardous Substances (China RoHS)
- WEEE Directive (Europe)
- Packaging Directive (Europe)

Certifications / Registrations / Declarations

The following is a list of the required certifications, registrations, and declarations:

- NRTL Certification (US/Canada)
- CE Declaration of Conformity (GENELEC Europe)
- FCC/ICES-003 Class A Attestation (USA/Canada)
- VCCI Certification (Japan)
- C-Tick Declaration of Conformity (Australia)
- MED Declaration of Conformity (New Zealand)
- BSMI Certification (Taiwan)
- GOST R Certification / Certification (Russia)
- Belarus Certification / Certification (Belarus)
- IRAM Certification (Argentina)
- CNCA CCC Certification (China)
- Ecology Declaration (International)
- China RoHS Environmental Friendly Use Period
- Packaging & Product Recycling Marks

Electromagnetic compatibility notices

The following sections list the compatibility notices for USA, Canada, Europe, Japan, and Taiwan.

FCC Verification Statement (USA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If the equipment is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to a radio or a television reception (can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit other than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the grantee of this device can void the user's authority to operate the equipment. The customer is responsible to ensure the compliance of the modified product. Only peripherals (computer input or output devices, terminals, printers, etc.) that comply with FCC Class A or B limits may be attached to this product. Operation with noncompliant peripherals is likely to result in interference to radio and TV reception. All cables that are used to connect to peripherals must be shielded and grounded. Operation with Regulatory and compliance information 65 Electromagnetic compatibility notices the cables that are connected to peripherals that are not shielded and grounded may result in interference to radio and TV reception.

ICES-003 (Canada)

Cet appareil numérique respecte les limites bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques", NMB-003 édictée par le Ministre Canadien des Communications.

English translation of the notice above:

This digital apparatus does not exceed the Class A limits for radio noise emissions from the digital apparatus that is set out in the interference-causing equipment standard entitled: "Digital Apparatus," ICES-003 of the Canadian Department of Communications.

CE Declaration of Conformity (Europe)

This product has been tested in accordance to, and complies with the Low Voltage Directive (73/23/EEC) and EMC Directive (89/336/EEC). The product has been marked with the CE Mark to illustrate its compliance.

VCCI (Japan)

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI) from Information Technology Equipment. If the product is used near a radio or a television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

BSMI (Taiwan)

The BSMI Certification Marking and EMC warning label is located on the outside rear area of the product.

Index

Symbols

- 16Gb Fibre Channel HBA 27
- 5U84 Expansion Storage Shelf
 - about 35
 - control panel 50
 - control panel functions 51
 - drawer Sideplane hot swap LED indicators 48
 - drawer Sideplane Status panels 46
 - Expansion I/O modules 58
 - components and locations 59
 - printed circuit board (PCB) assembly 44
 - rear components 51
 - component locations 53
 - technical specifications 75
- 5U84 Expansion Storage Shelf serial number location 12
- 5U84 Primary Storage Shelf
 - about 35
 - control panel 50
 - control panel functions 51
 - cooling module components 61
 - cooling modules 61
 - component locations 62
 - drawer Sideplane hot swap LED indicators 48
 - drawer Sideplane Status panels 46
 - printed circuit board (PCB) assembly 44
 - RAID Controller 54
 - components and locations 54
 - rear components 51
 - component locations 52
 - technical specifications 75
- 5U84 Primary Storage Shelf serial number location 12
- 5U84 Storage Shelf Power Supply Units (PSU) 62
 - component locations 63
- 5U84 Storage Shelves
 - about 35
 - core components 35
 - disk drive drawers 39
 - Disk Drive In Carrier (DDIC) modules 41
 - components and locations 43
 - disk drive slot numbering 39

- 5U84 Storage Shelves *(continued)*
 - plug-in modules 35
 - printed circuit board (PCB) assembly
 - Baseplane cards 44
 - Sideplane cards 44
 - storage options 37
 - supported RAID levels 35
- 8Gb Fibre Channel HBA 31

A

- appliance
 - power button LED 20
 - system memory configuration 8
- appliance compute node
 - disk drive layout 13

C

- Cable connection types
 - Direct-attach / Twinaxial 26
 - fiber optic 26
- cables
 - multi-mode fiber optic
 - description 67
 - network
 - description 66
 - power
 - description 64
 - SAS3
 - description 68
- Compute node
 - control panel 15
 - Power button LED states 20
 - system Status LED indicator 17
 - disk drive LED indicators 14
 - disk drive LEDs 14
 - front panel USB port 15
 - rear panel
 - features and connectors 21
- compute node serial number location 12

- Control panel
 - 5U84 Expansion Storage Shelf 50
 - control panel functions 51
 - 5U84 Primary Storage Shelf 50
 - control panel functions 51
 - compute node 15
 - power button LED states 20
 - system LED descriptions 15
 - system Status LED indicator 17
- D**
- DIMM
 - system memory configuration 8
- Disk drive drawers
 - 5U84 Storage Shelves 39
- Disk Drive In Carrier (DDIC) modules
 - 5U84 Storage Shelves 41
 - components and locations 43
- disk drive layout
 - appliance compute node 13
- disk drive LED indicators
 - compute node 14
- disk drive LEDs
 - compute node indicators 14
- Disk drive slot numbering
 - 5U84 Storage Shelves 39
- Drawer Sideplane hot swap LED indicators
 - 5U84 Expansion Storage Shelf 48
 - LED indicator statuses 49
 - 5U84 Primary Storage Shelf 48
 - LED indicator statuses 49
- E**
- environmental specifications
 - NetBackup 5340 Appliance / Veritas 5U84
 - Primary/Expansion Storage Shelf 78
- eth ports 33
- Expansion I/O modules
 - 5U84 Expansion Storage Shelf 58
 - components and locations 59
 - Veritas 5U84 Expansion Storage Shelf
 - LED location and conditions 59
- F**
- FC HBA LED status lights 31
 - 16Gb Fibre channel HBA 27
- Fibre Channel card 27, 31
- I**
- I/O configurations
 - standard available options 24
- I/O ports
 - on-board 26
 - PCI-based 26
 - total number of 26
- L**
- LED descriptions
 - NetBackup 5340 Appliance
 - system status 17
- LED indicator status
 - Fibre Channel HBA 29, 32
- LED location and conditions
 - Expansion I/O modules
 - Veritas 5U84 Expansion Storage Shelf 59
- N**
- NetBackup 5340 Appliance
 - control panel
 - system status LED location 17
 - features
 - processor 8
 - RAID levels 8
 - system memory configuration (DIMMS) 8
- NetBackup 5340 Appliance storage options 37
- Network interface port locations and speeds 33
- P**
- PCIe add-in cards
 - 16Gb Fibre Channel HBA 27
 - 8Gb Fibre Channel HBA 31
 - specifications
 - QLE2562 dual-port 8Gb FC HBA 31
 - QLE2592 dual-port 16Gb FC HBA 27
- PCIe-based slot configurations
 - standard available configurations 24
- power button LED
 - appliance 20
 - descriptions 20
- Power button LED states
 - compute node
 - control panel 20
- Power Supply Units
 - 5U84 Storage Shelf 62
 - 5U84 Storage Shelf Power Supply Units (PSU)
 - component locations 63

- Printed circuit board (PCB) assembly
 - 5U84 Storage Shelves
 - Baseplane cards 44
 - components 44
 - Sideplane cards 44
- processor type 8
- protocol standards
 - NetBackup 5340 Appliance / Veritas 5U84
 - Primary/Expansion Storage Shelf 78

Q

- QLE8442 dual-port 10Gb Ethernet card
 - dual-port 30

R

- RAID Controller 54
 - component locations 55
- RAID levels 8
 - supported 35
- Rear panel
 - 5U84 Expansion Storage Shelf
 - components 51
 - 5U84 Primary Storage Shelf
 - components 51
 - compute node
 - features and connectors 21

S

- SAS Activity LED location and conditions
 - Expansion I/O modules
 - Veritas 5U84 Expansion Storage Shelf 60
- serial number locations
 - 5U84 Expansion Storage Shelf 12
 - 5U84 Primary Storage Shelf 12
 - compute node 12
- Sideplane Status panels
 - 5U84 Storage Shelves 46
 - descriptions 47
 - locations 46
 - statuses 48
- Status LED indicator
 - compute node control panel 17
- Storage options
 - by disk drive capacities 38
 - NetBackup 5340 Appliance system 37
- system status
 - NetBackup 5340 Appliance
 - LED descriptions 17

- system status LED location
 - NetBackup 5340 Appliance
 - control panel 17

T

- Technical specifications
 - Veritas 5U84 Storage Shelf 75
- technical specifications
 - NetBackup 5340 Appliance compute node 72

U

- USB port
 - compute node front panel location 15

V

- Veritas 5U84 Expansion Storage Shelf
 - Expansion I/O modules
 - LED location and conditions 59
 - SAS Activity LED location and conditions 60